

ASSEMBLY INSTRUCTIONS

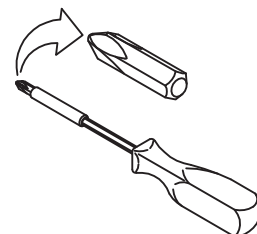
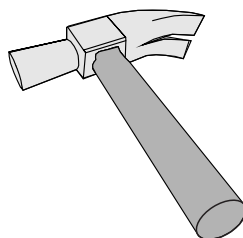
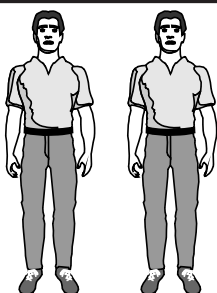
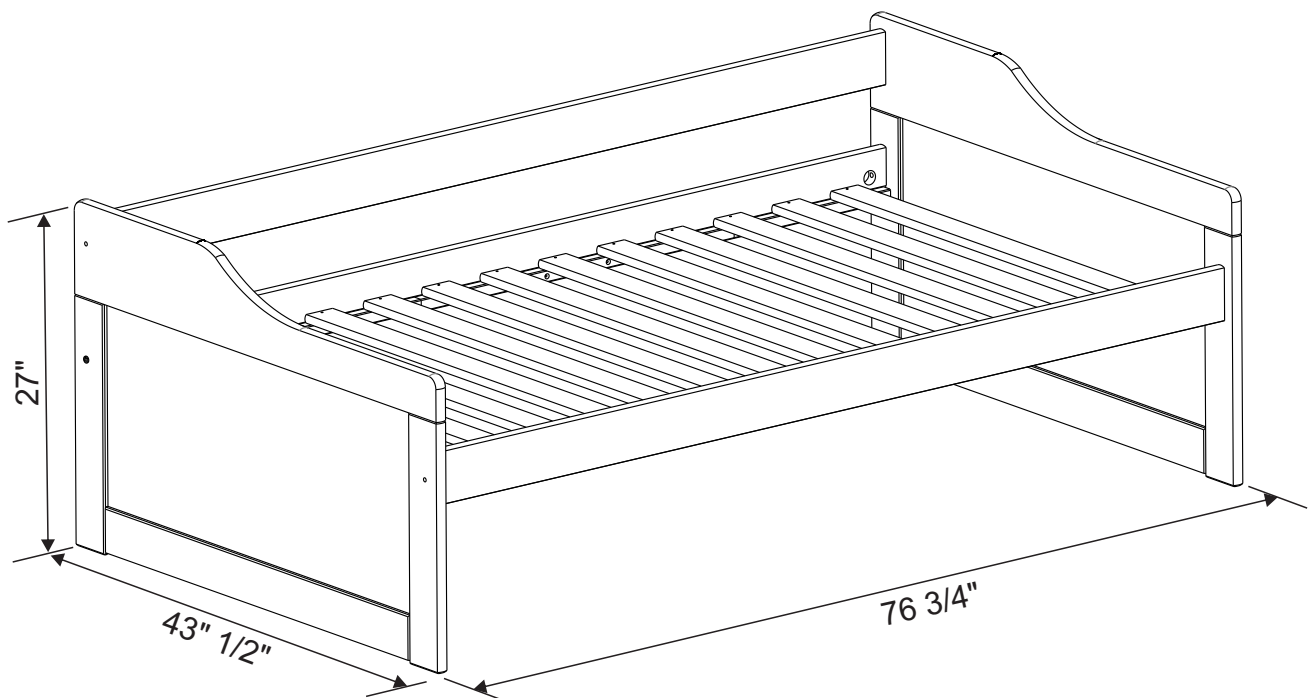
RIO DAYBED

Ref. 1321 - Whitewash











Ref. 1322 - Mahogany

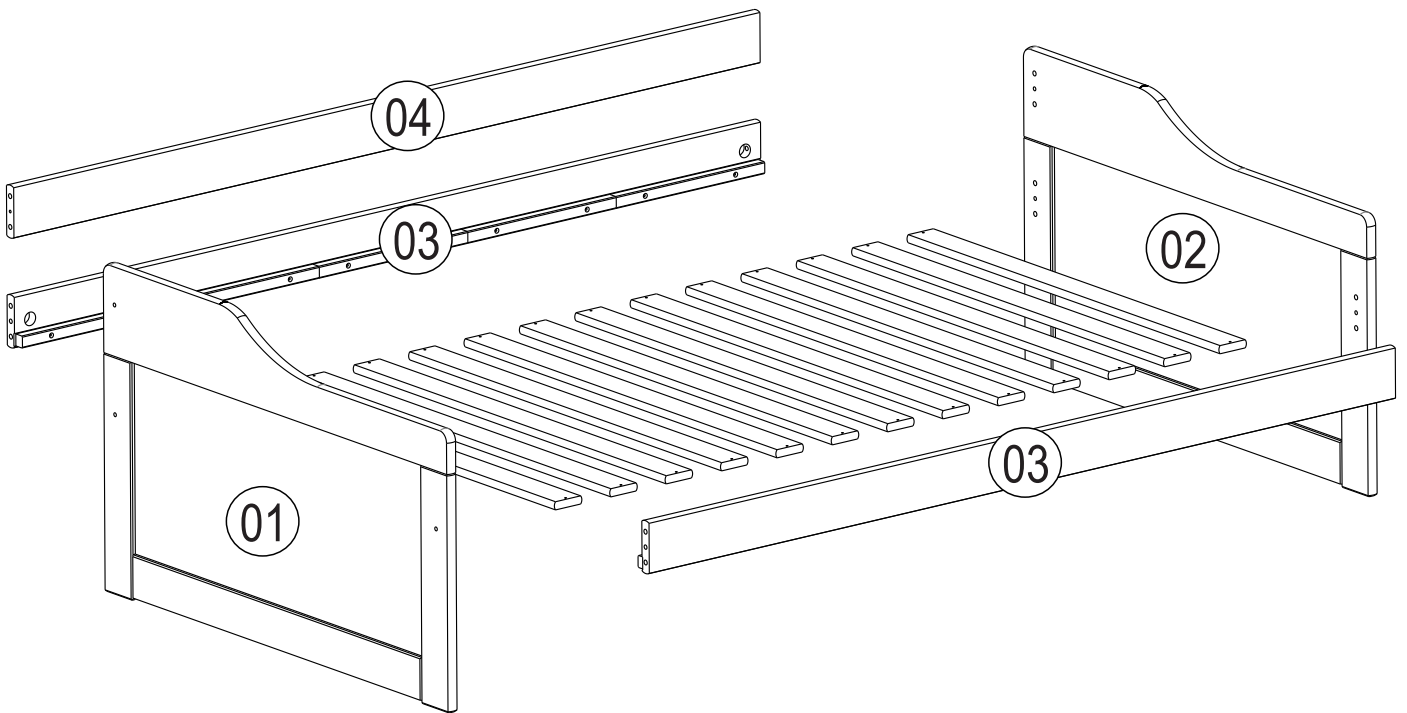
Ref. 1324 - Honey Pine

Ref. 1326 - Java

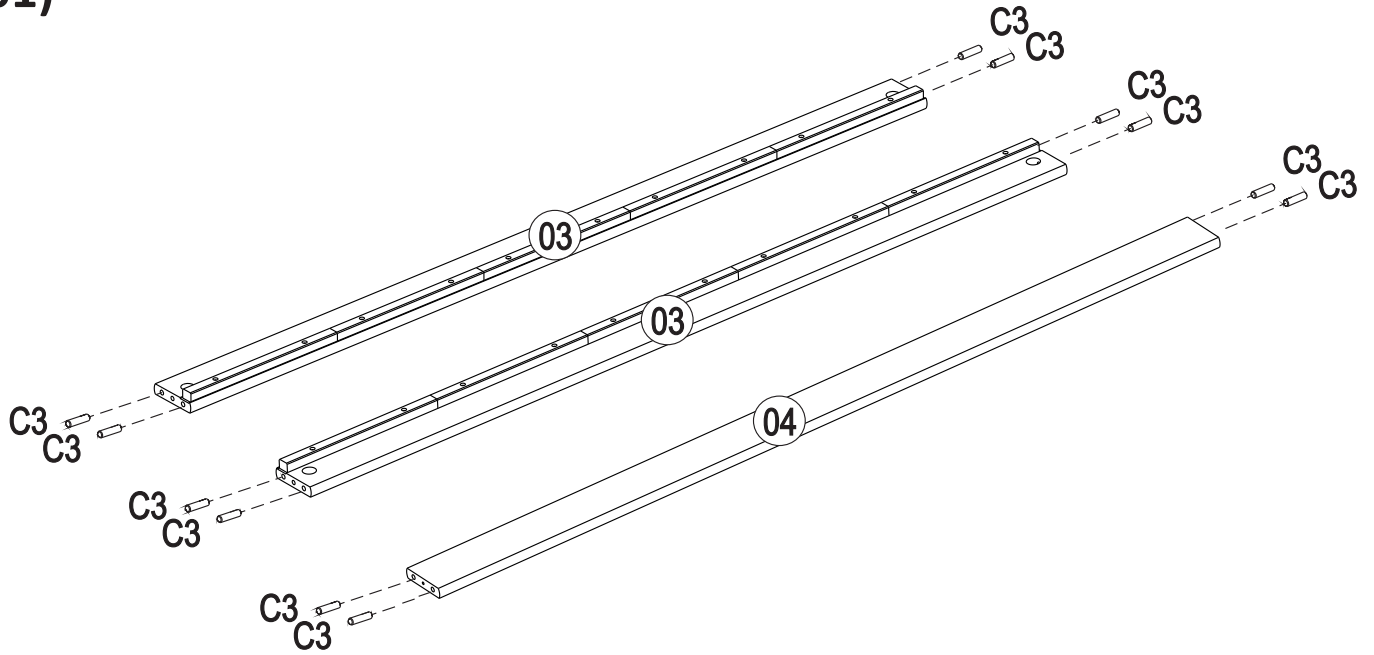



HARDWARE IS SHOWN IN ACTUAL SIZE

A12	 	26
		4,0x35
B5		04
		1/4"
B17	 	02
		7,0x60
B18	 	04
		1/4 x 70
C3		12
		10x40
G3		01
G4		02
		space block

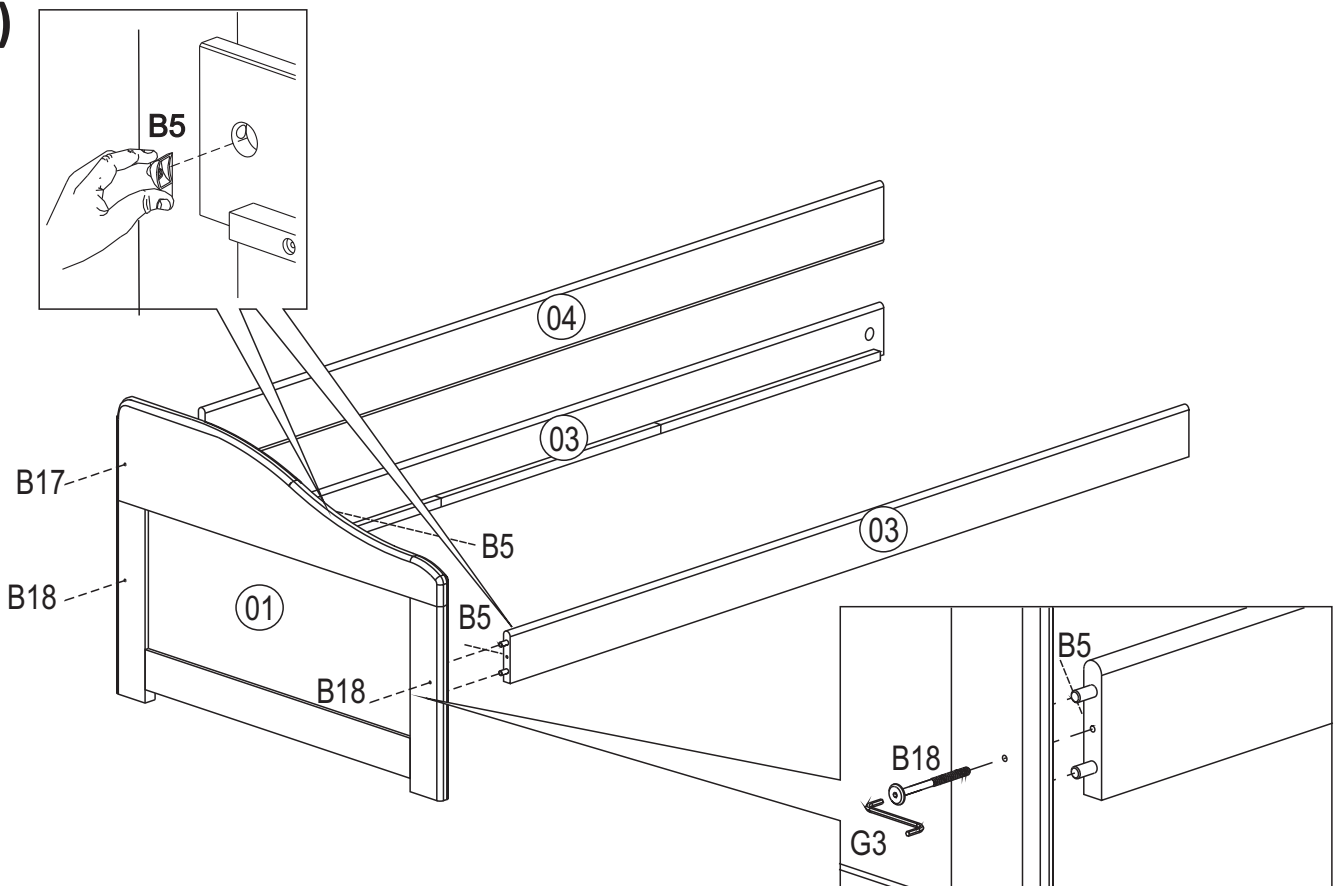




01)





C3		12
	10x40	

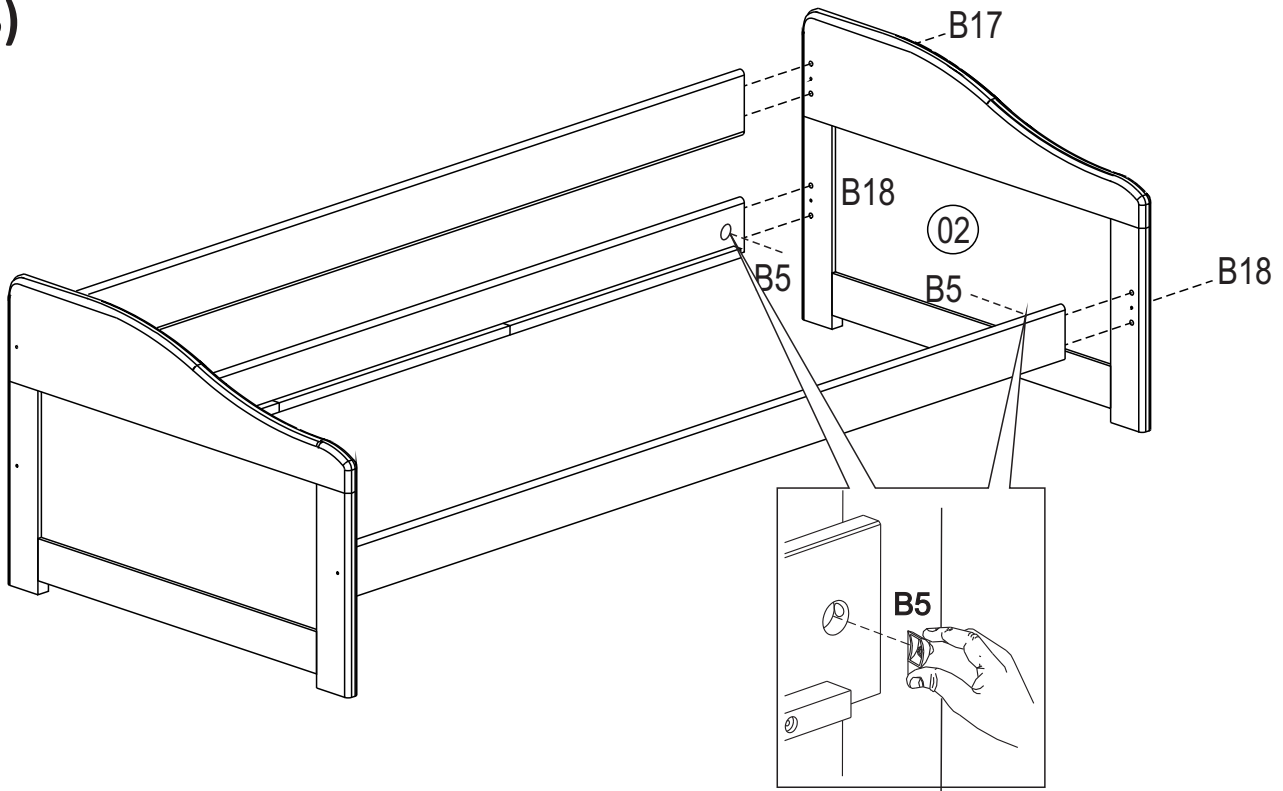
02)







B5		02
	1/4	
B17		02
	7,0x60	

B18		02
	1/4x70	
G3		01

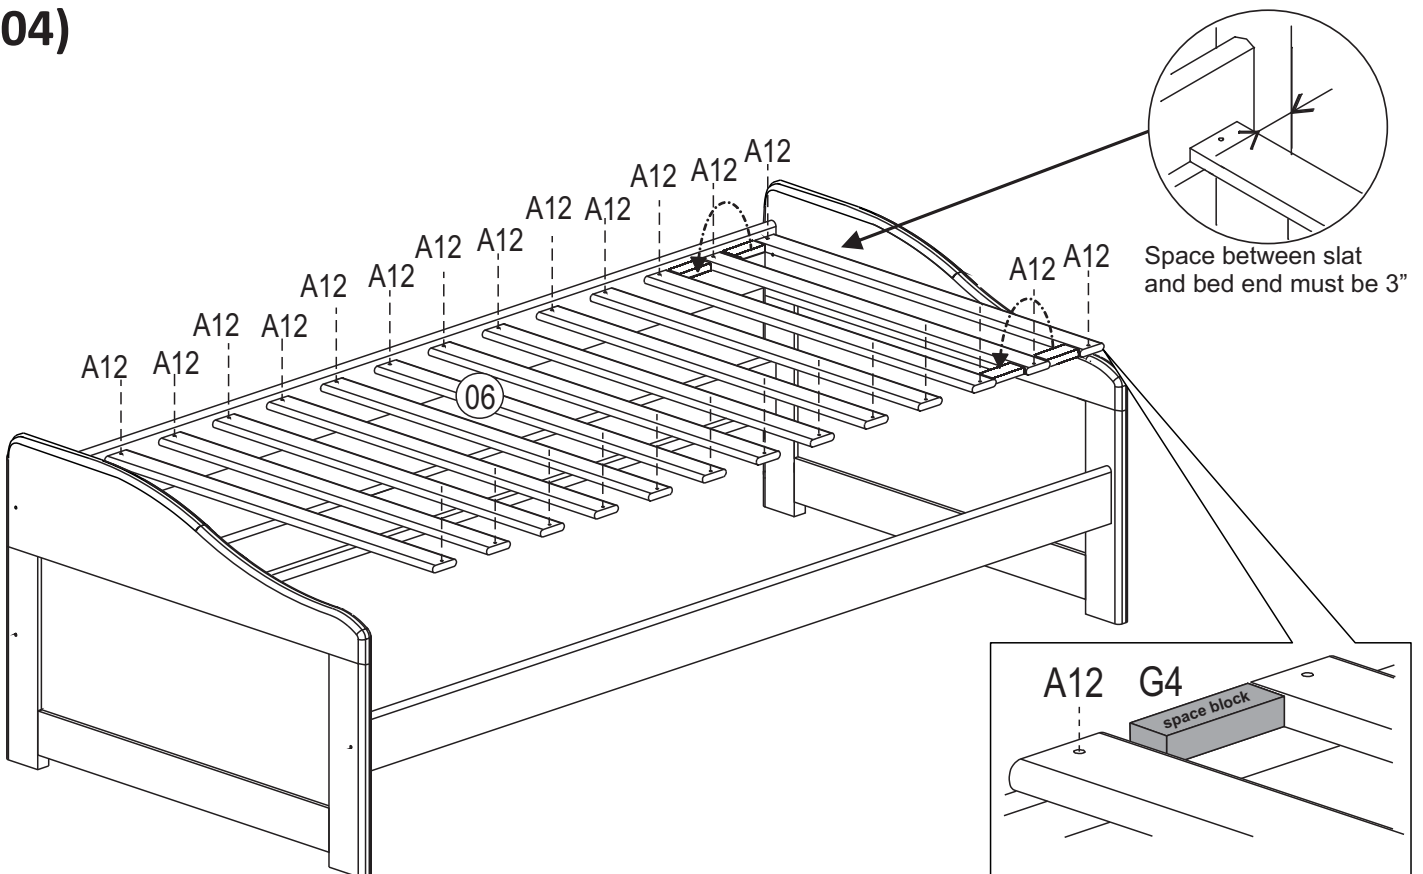
03)





B5		1/4	02
B17		7,0x60	02

B18		1/4x70	02
G3			01

04)



A12		4,0x35	26
-----	---	--------	----

G4		space block	02
----	--	-------------	----