

ASSEMBLY INSTRUCTIONS

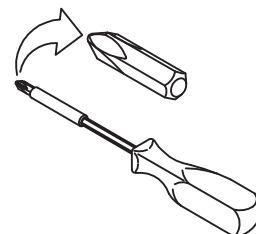
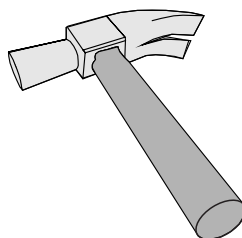
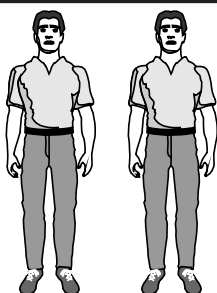
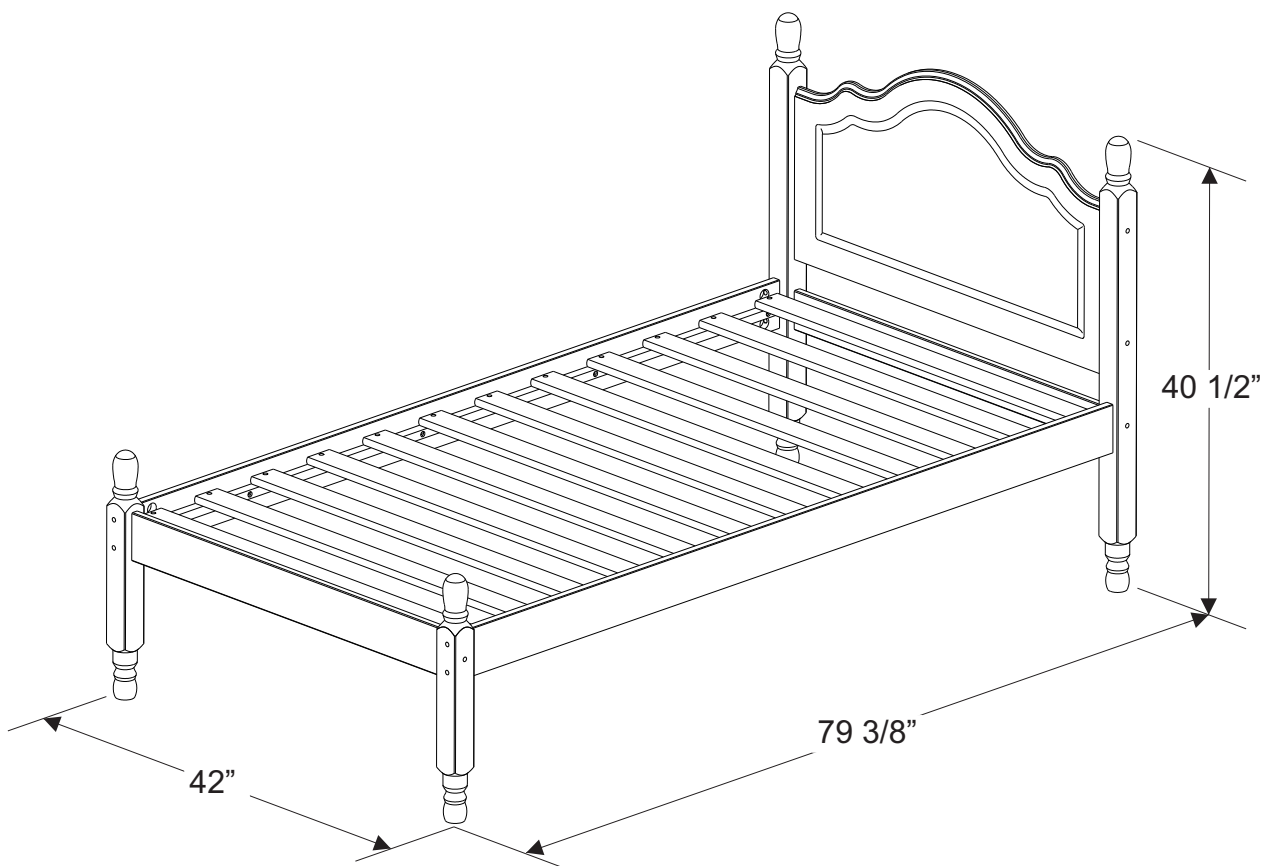
RESTON TWIN SIZE BED

Ref. 1431 - Whitewash




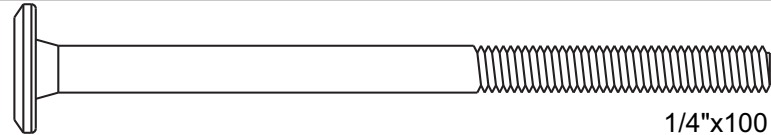



Ref. 1432 - Mahogany

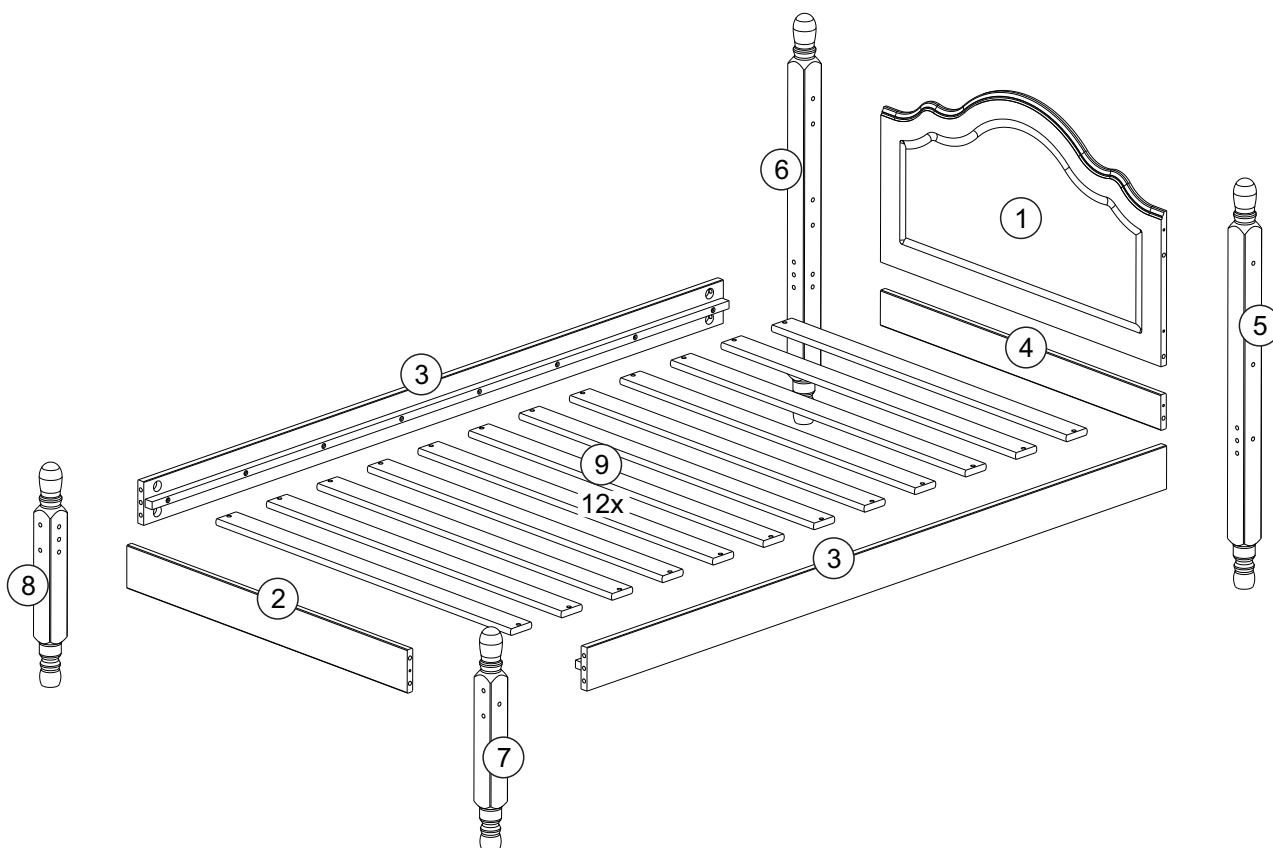
Ref. 1434 - Honey Pine

Ref. 1436 - Java

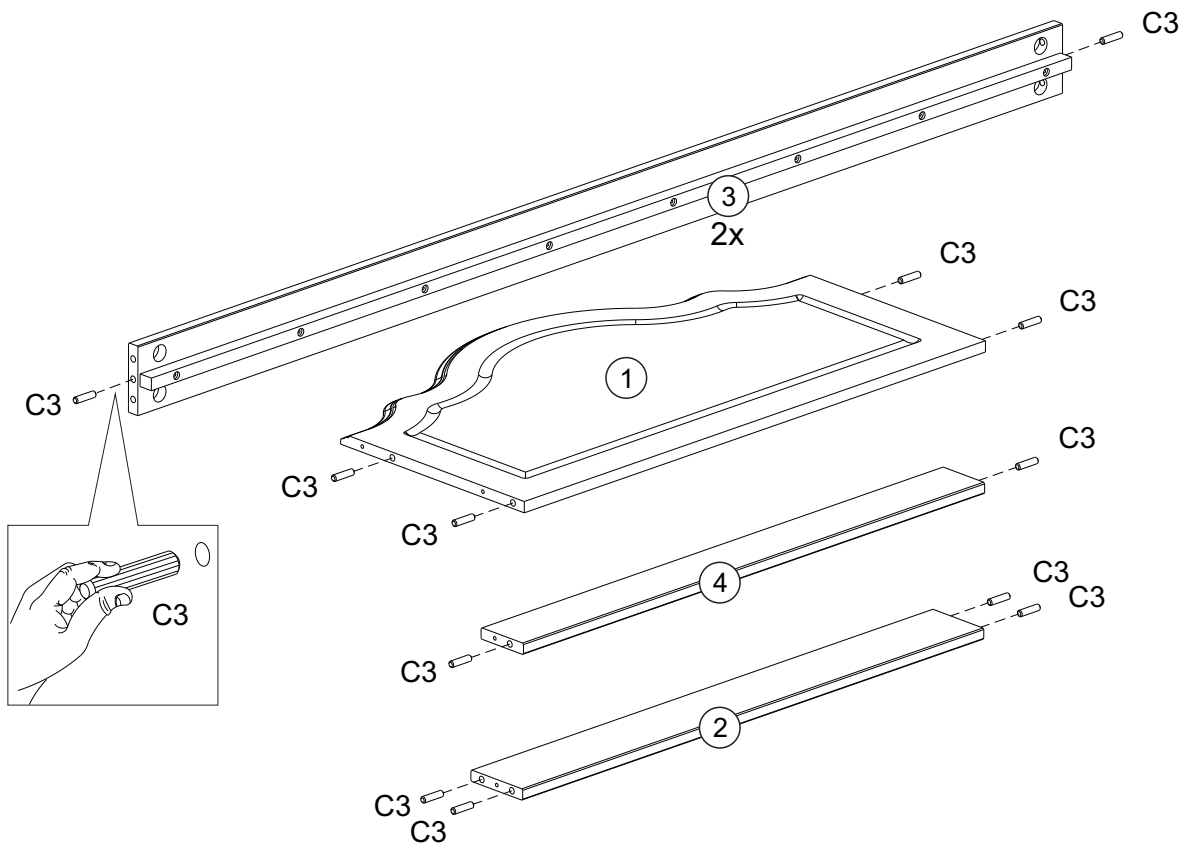


HARDWARE IS SHOWN IN ACTUAL SIZE

A14	 <p style="text-align: right;">3,5x35</p>	24
B1	 <p style="text-align: right;">7,0x100</p>	08
B5	 <p style="text-align: right;">1/4"</p>	08
B12	 <p style="text-align: right;">1/4"x100</p>	08
C3	 <p style="text-align: right;">10x40</p>	14
G3		01
G4	 <p style="text-align: right;">96mm</p>	02

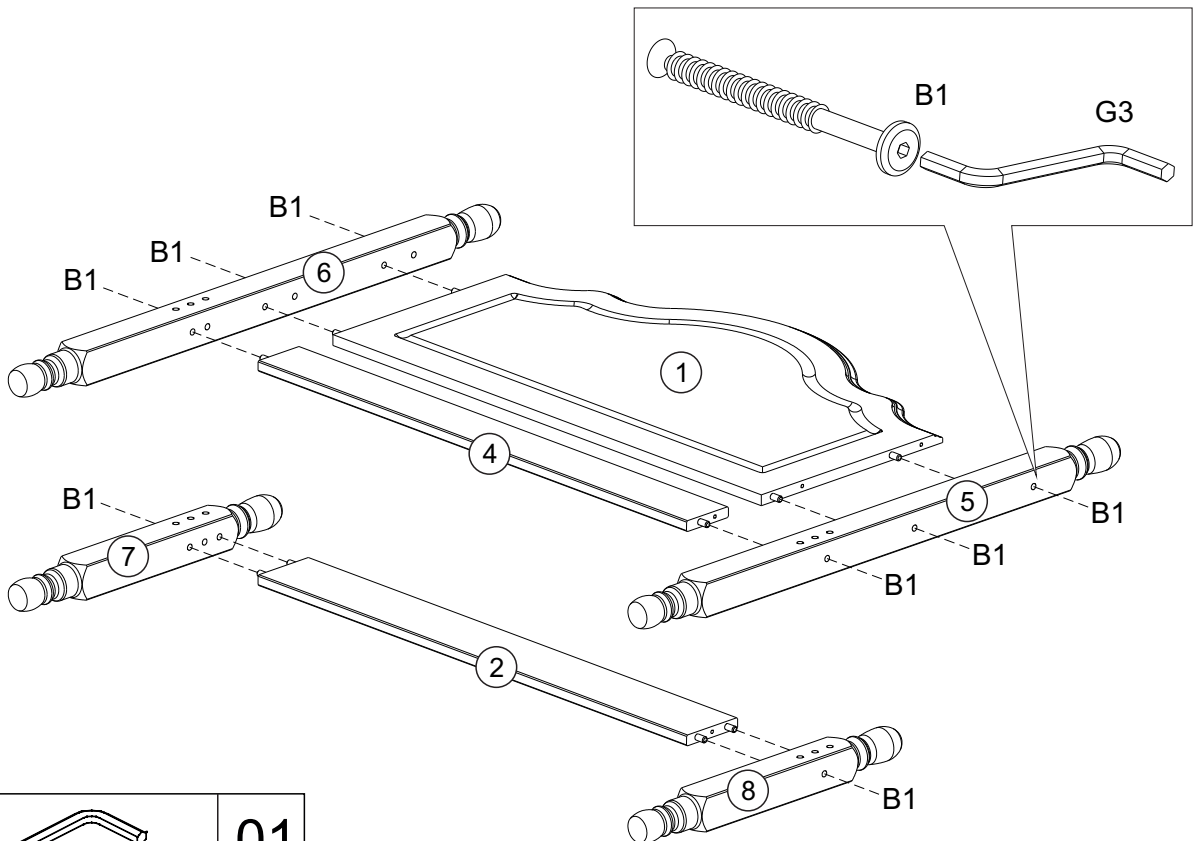


01)




C3		14
	10x40	

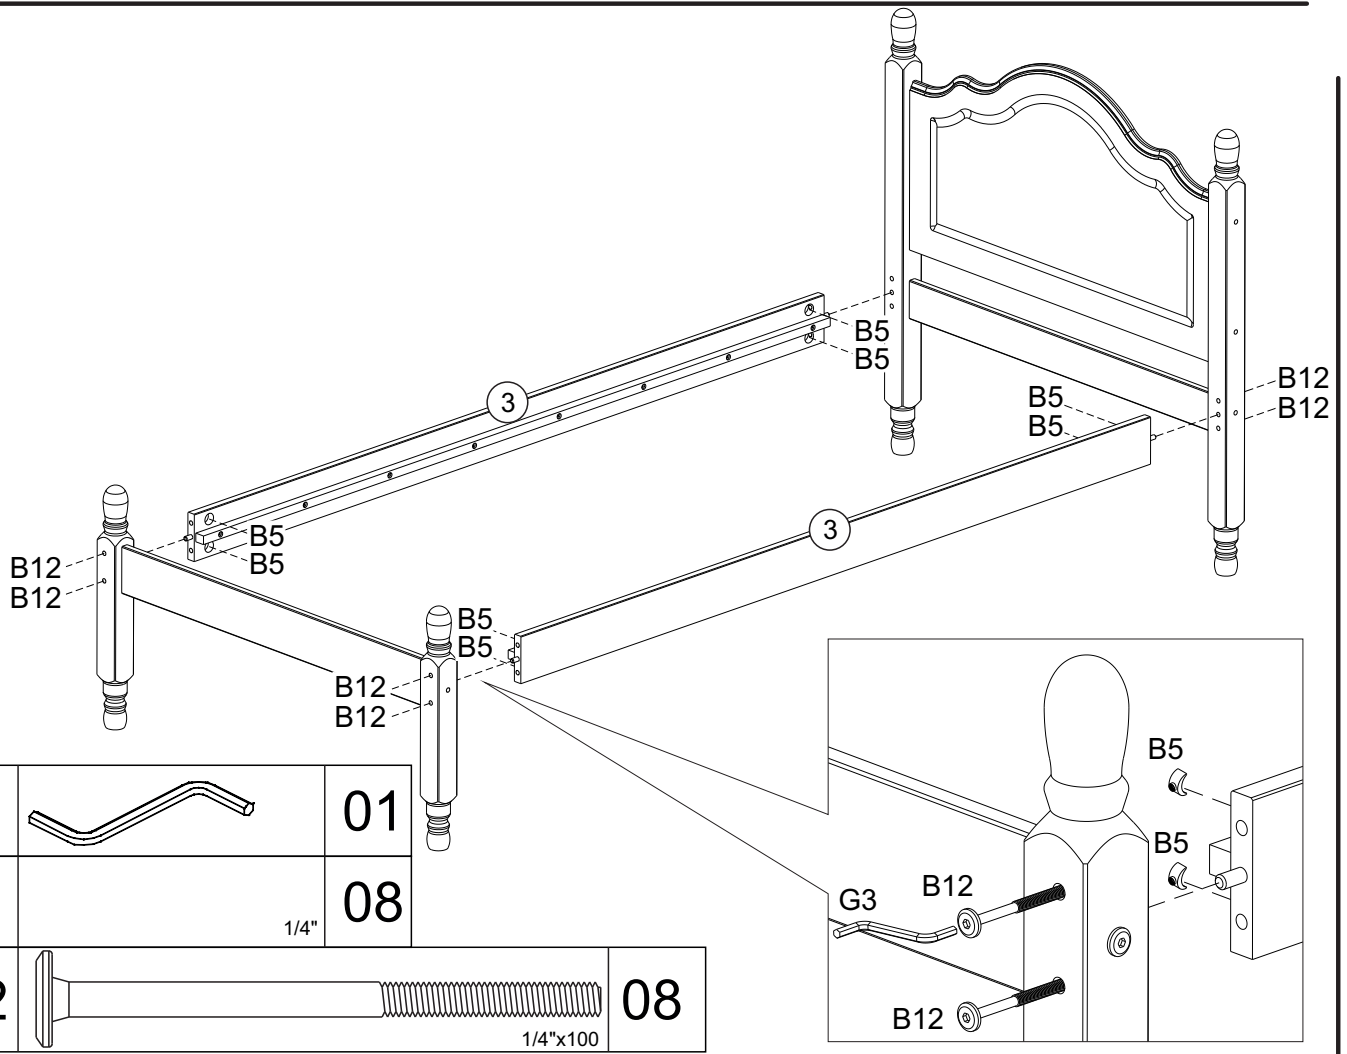
02)






G3		01
----	---	----

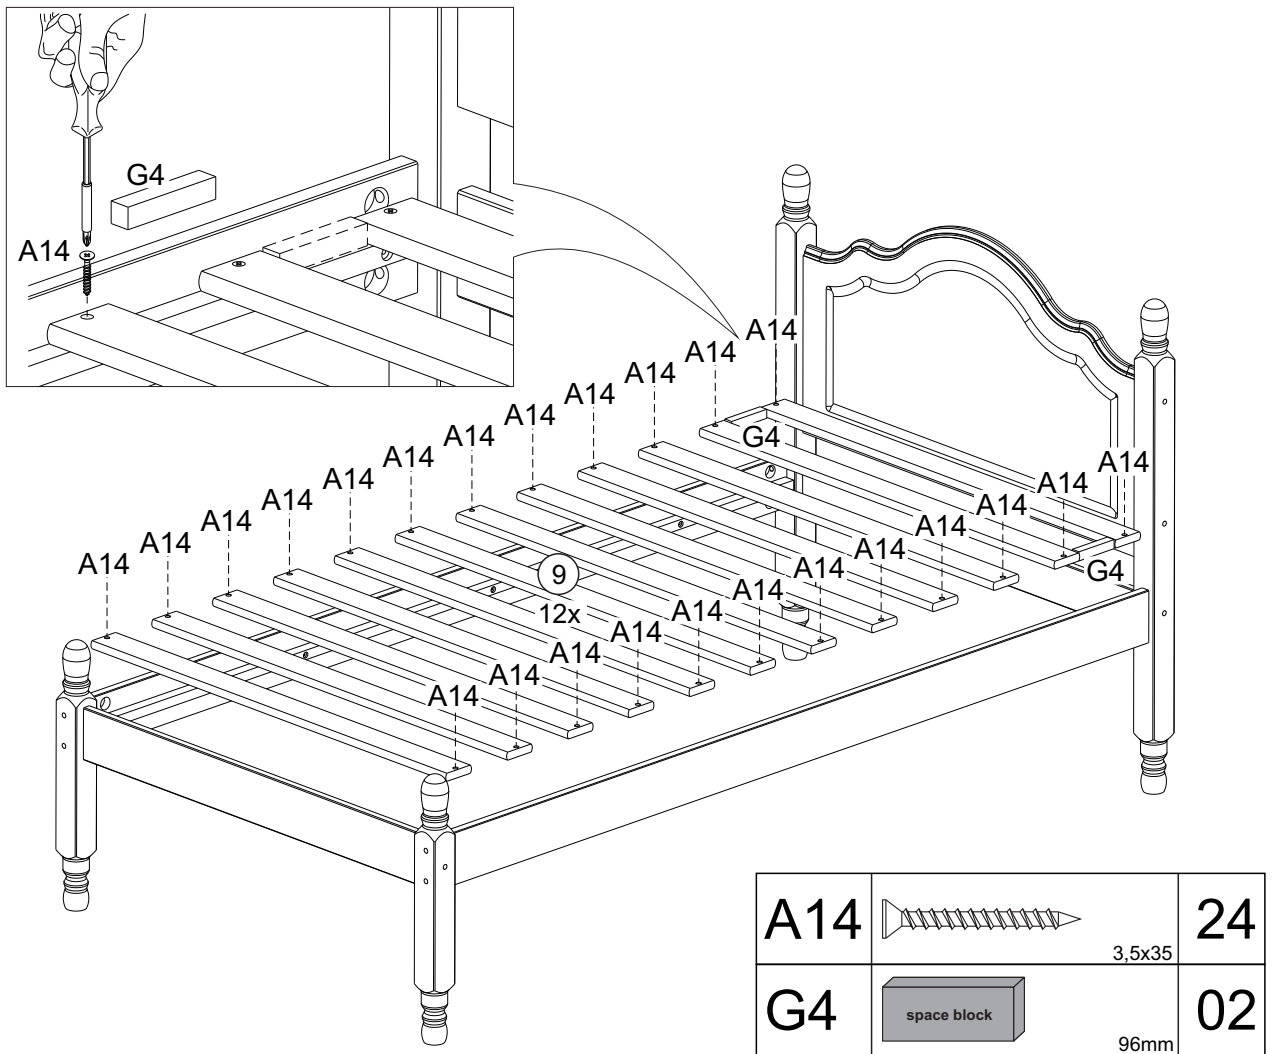
B1		08
	7,0x100	



03)



G3		01
B5	 1/4"	08
B12	 1/4"x100	08

04)



A14	 3.5x35	24
G4	 space block 96mm	02