

ASSEMBLY INSTRUCTIONS





RESTON FULL SIZE BED

Ref. 1441 - Whitewash





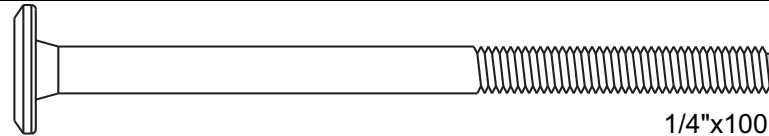




Ref. 1442 - Mahogany


Ref. 1444 - Honey Pine

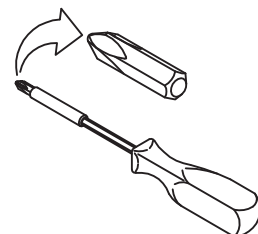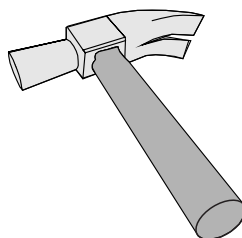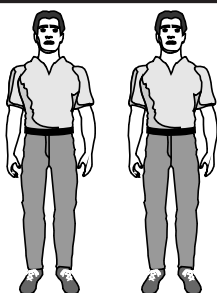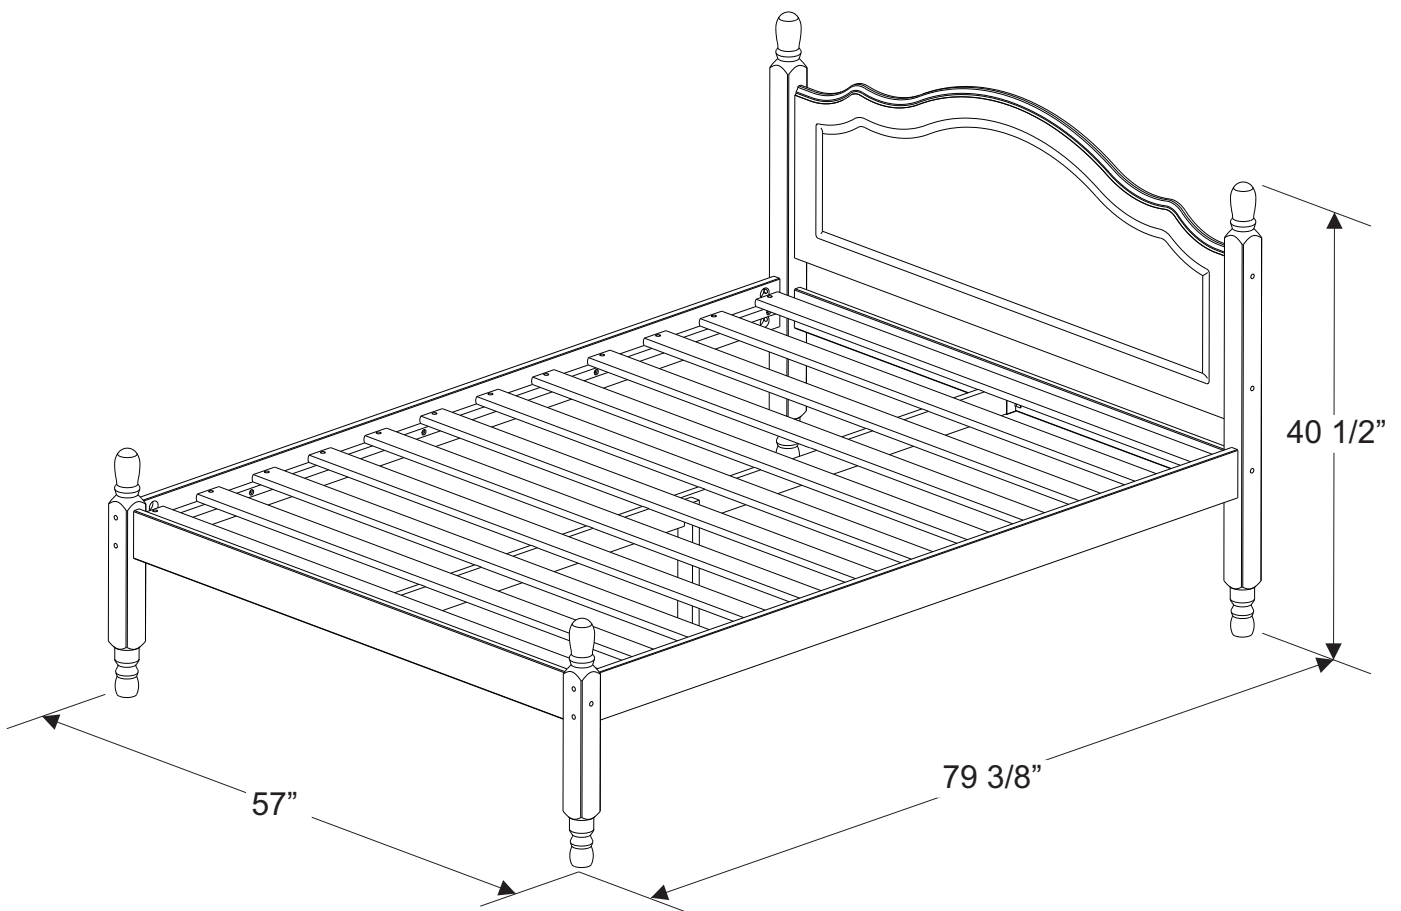Ref. 1446 - Java








HARDWARE IS SHOWN IN ACTUAL SIZE

A9	 3,5x16	10
A10	 3,5x30	26
B1	 7,0x100	08
B5	 1/4"	08
B12	 1/4"x100	08
C3	 10x40	14
D8	 20x50	02
G3		01
G4	 96mm	02

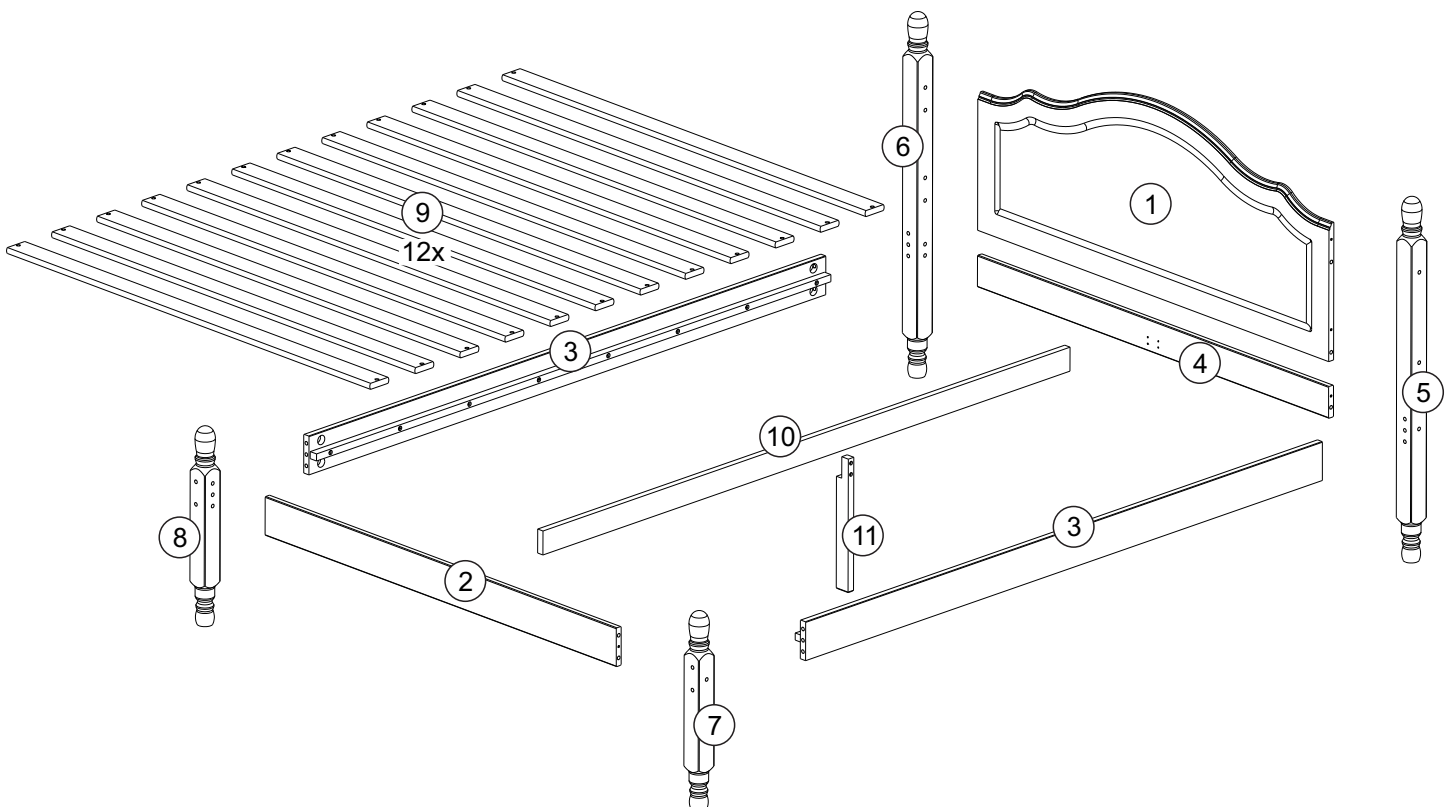




01)

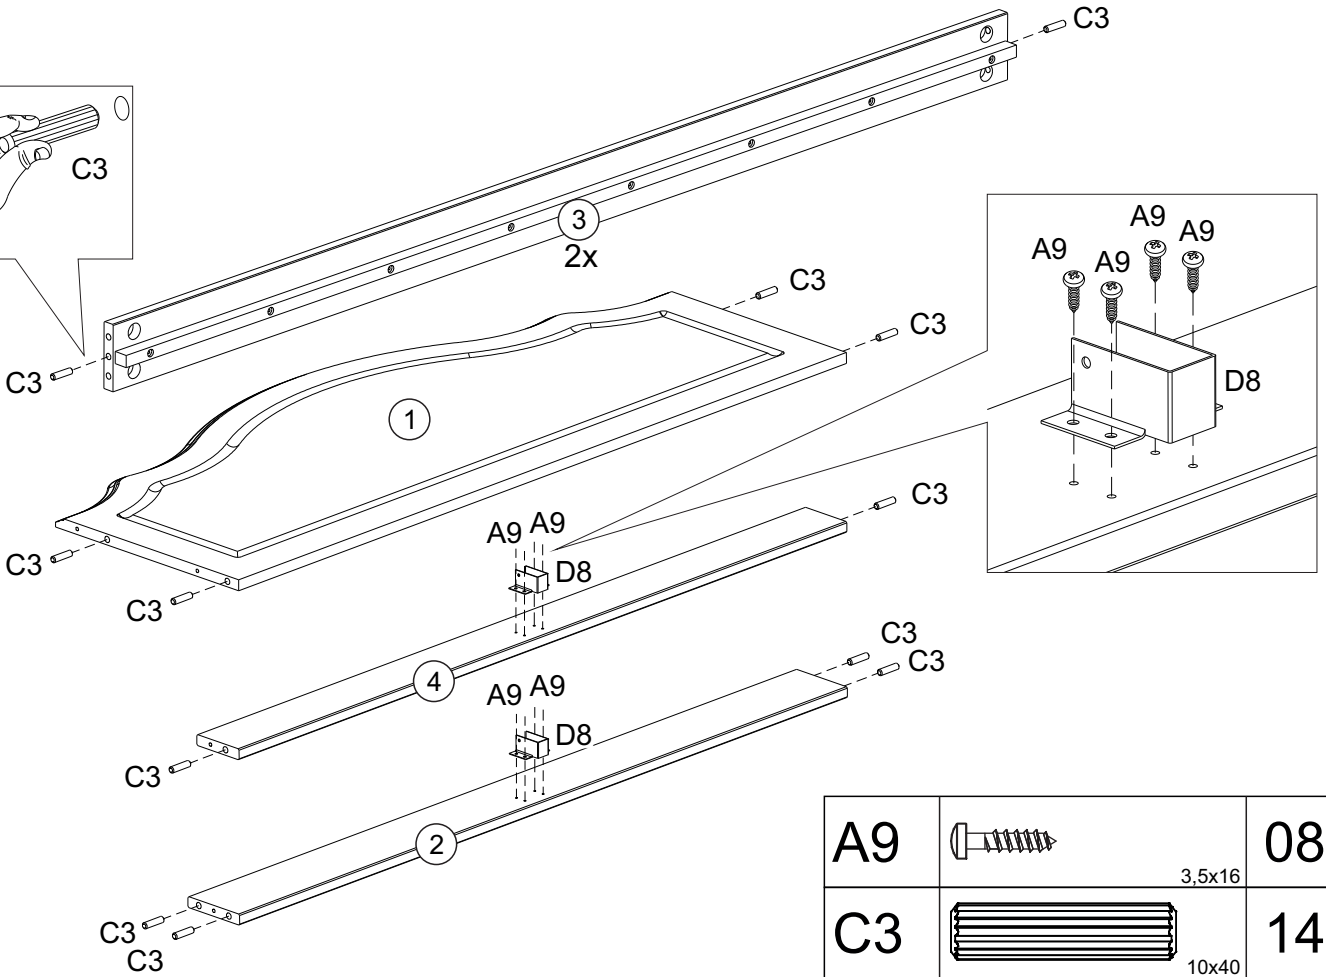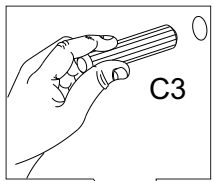


A9		08 3,5x16
C3		14 10x40
D8		02 20x50

02)

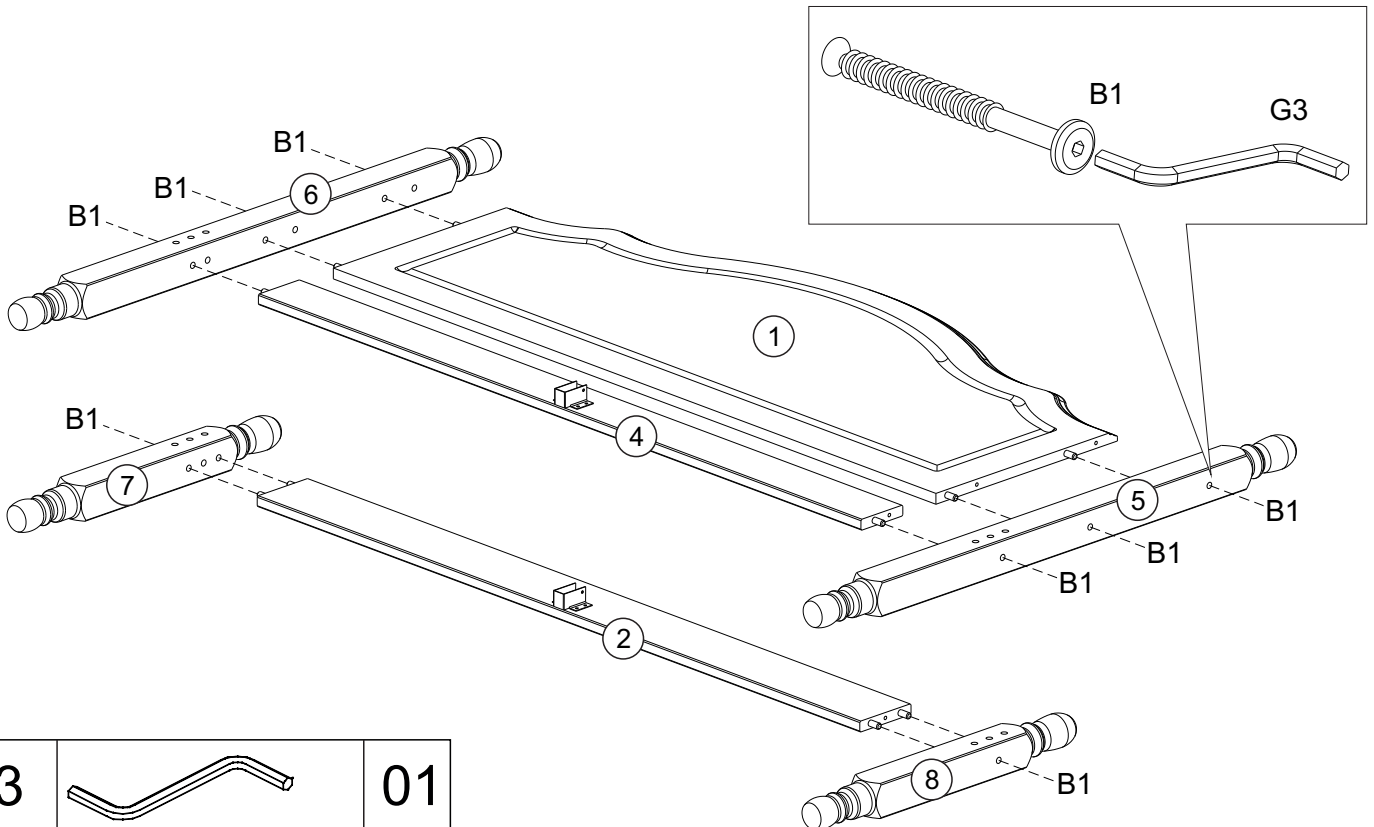


G3		01
B1		08 7,0x100


03)

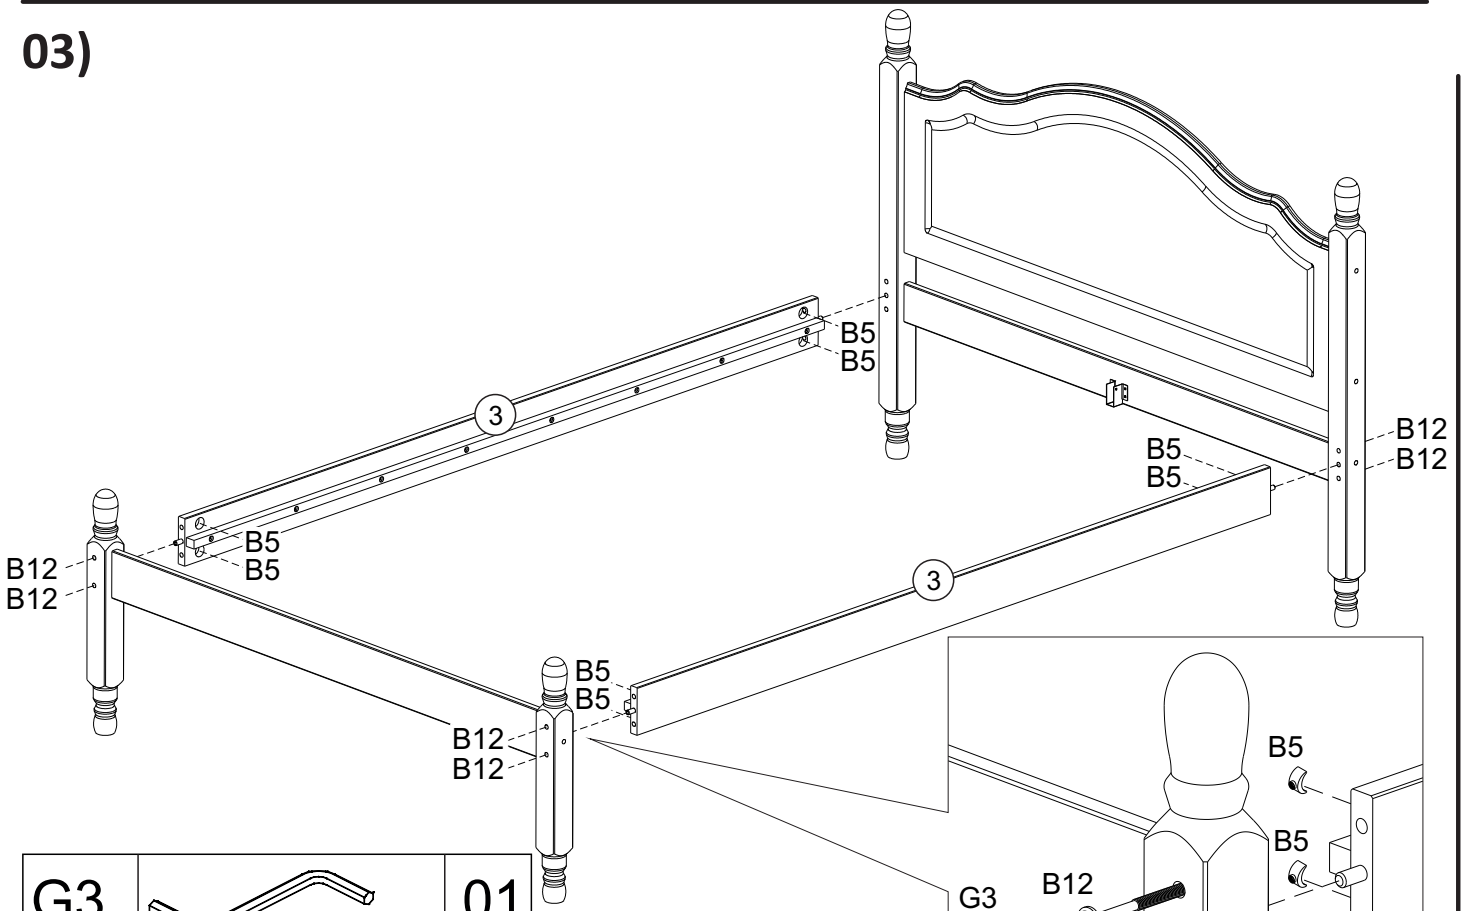


G3		01
B5		08
B12		08
	1/4"	1/4"x100

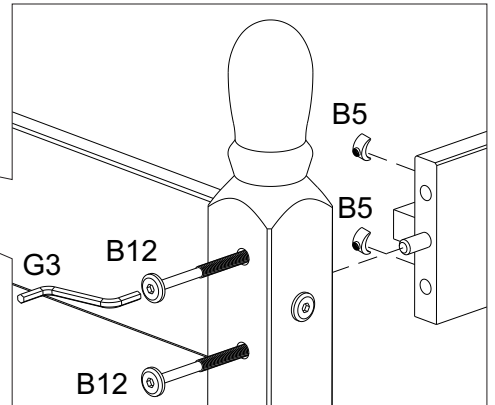


04)

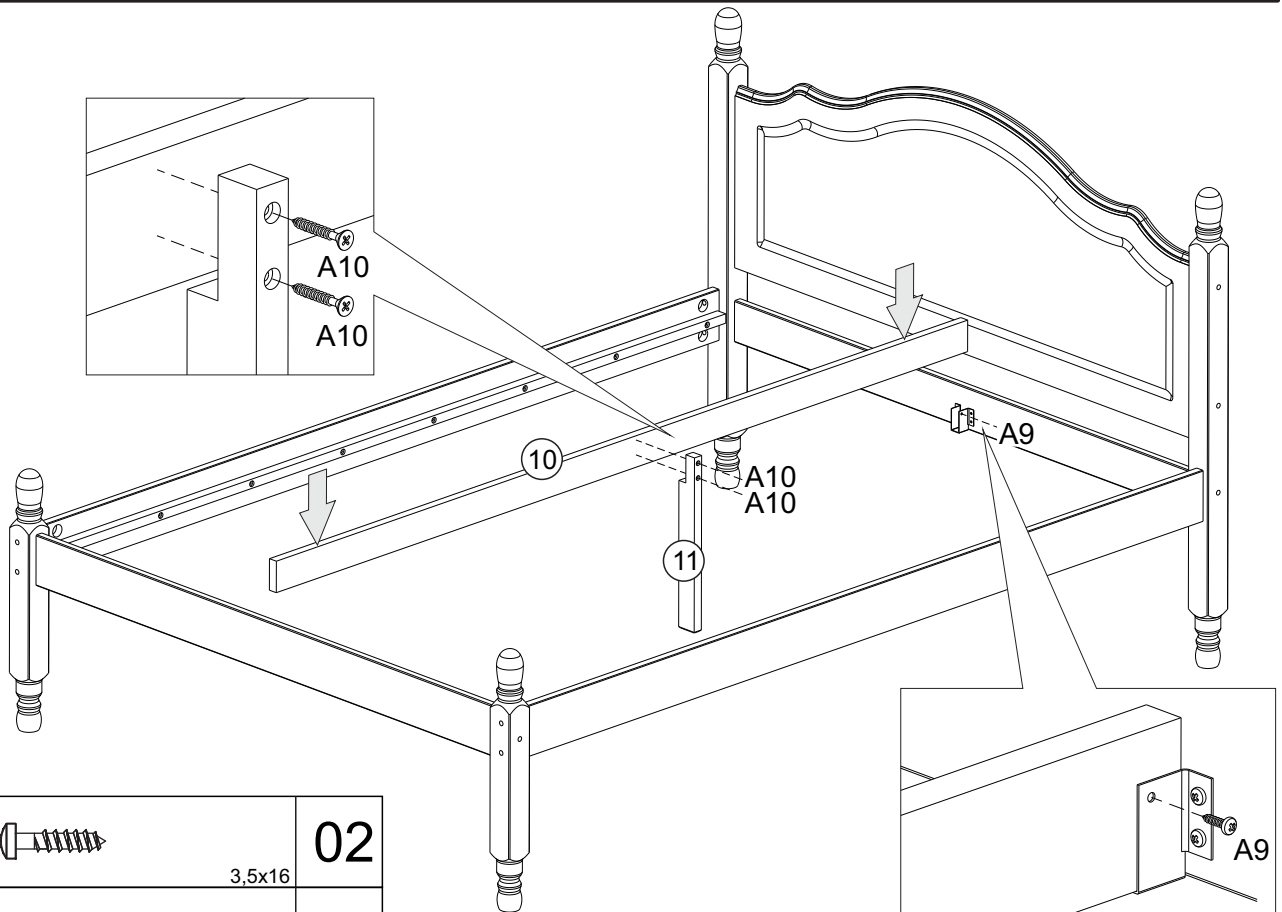

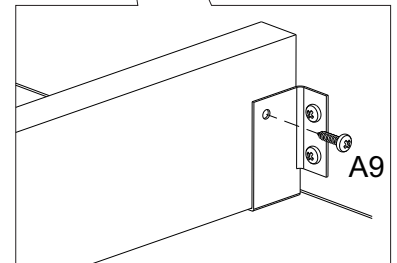

A9		02
	3,5x16	
A10		02
	3,5x30	

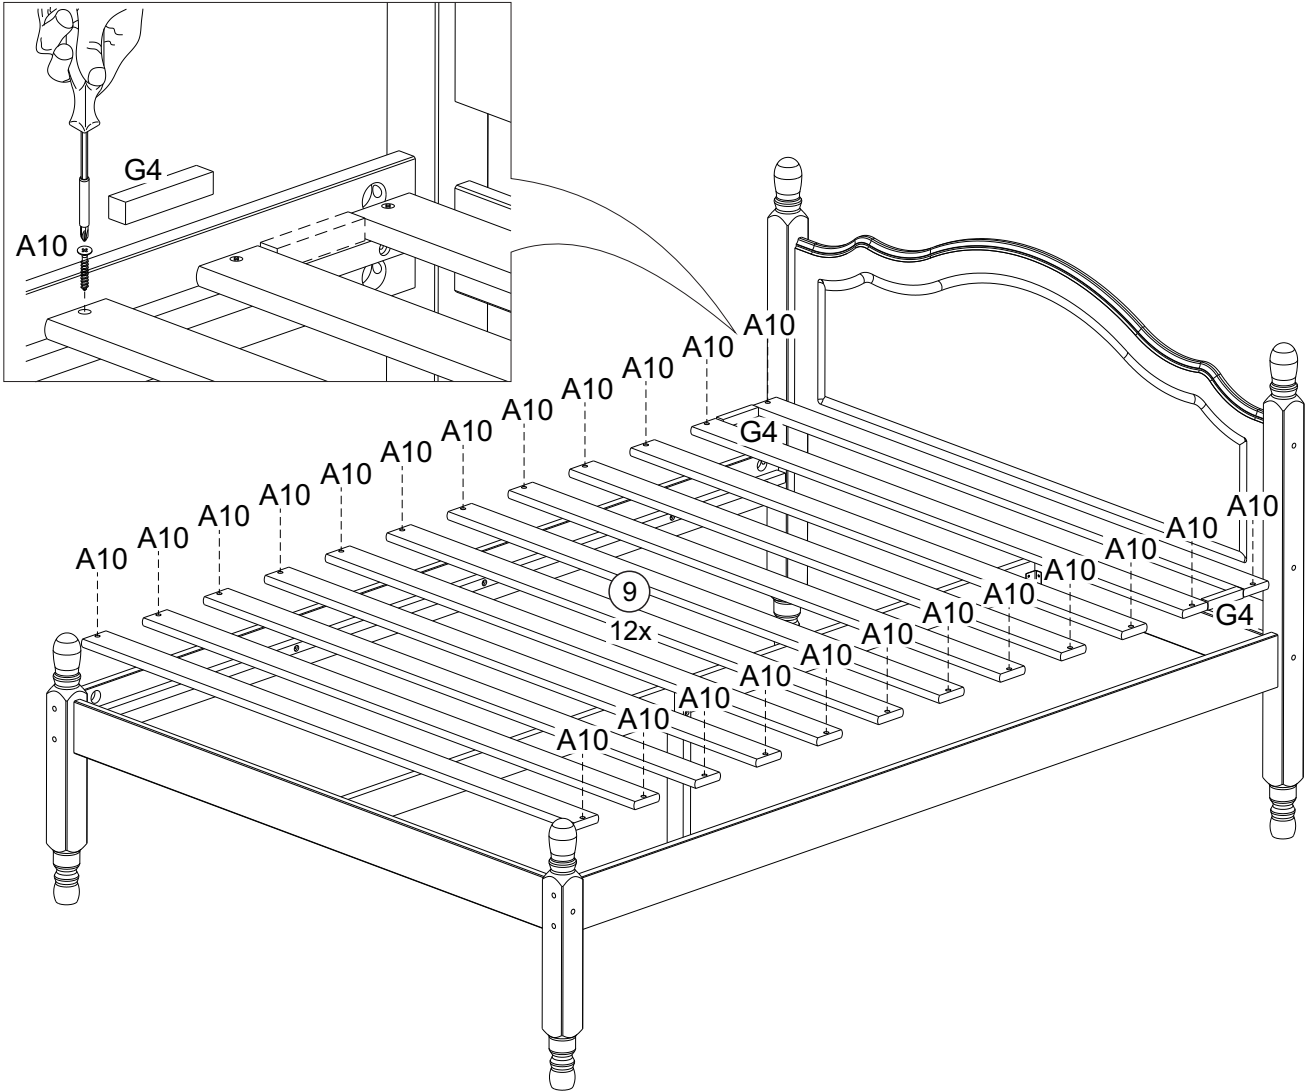

05)



A10	 3,5x30	24
G4	 space block 96mm	02