





# ASSEMBLY INSTRUCTIONS

## FAMILY 4-DOOR WARDROBE






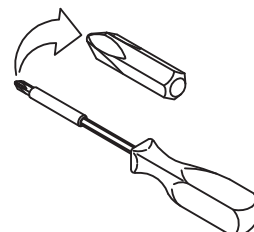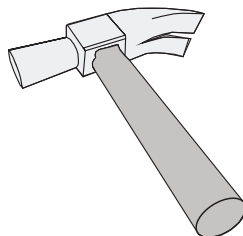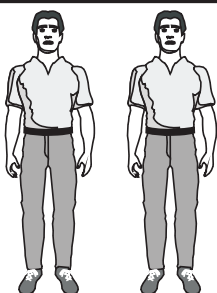
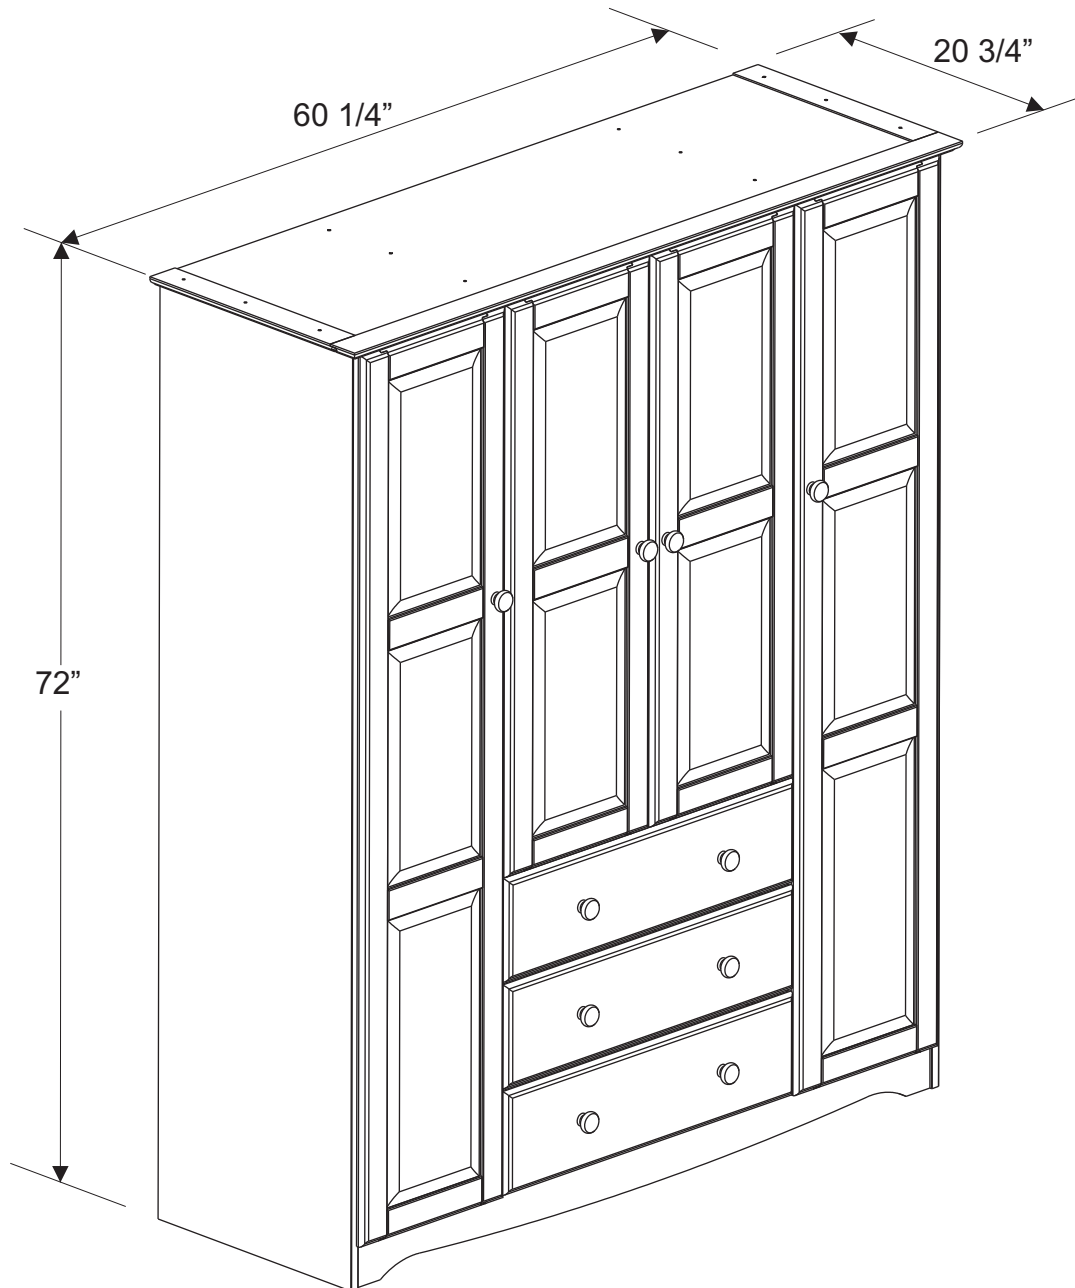


SKU 5962 - Mahogany









SKU 5964 - Honey


SKU 5966 - Java




SCREWS ARE SHOWN IN ACTUAL SIZE






A1	 4,0x30	70
A4	 3,5x14	30
A9	 3,5x16	70
A16	 4,0x40	12
C2	 8,0x25	62
D3		01
D10		06
D16		02
D27		10

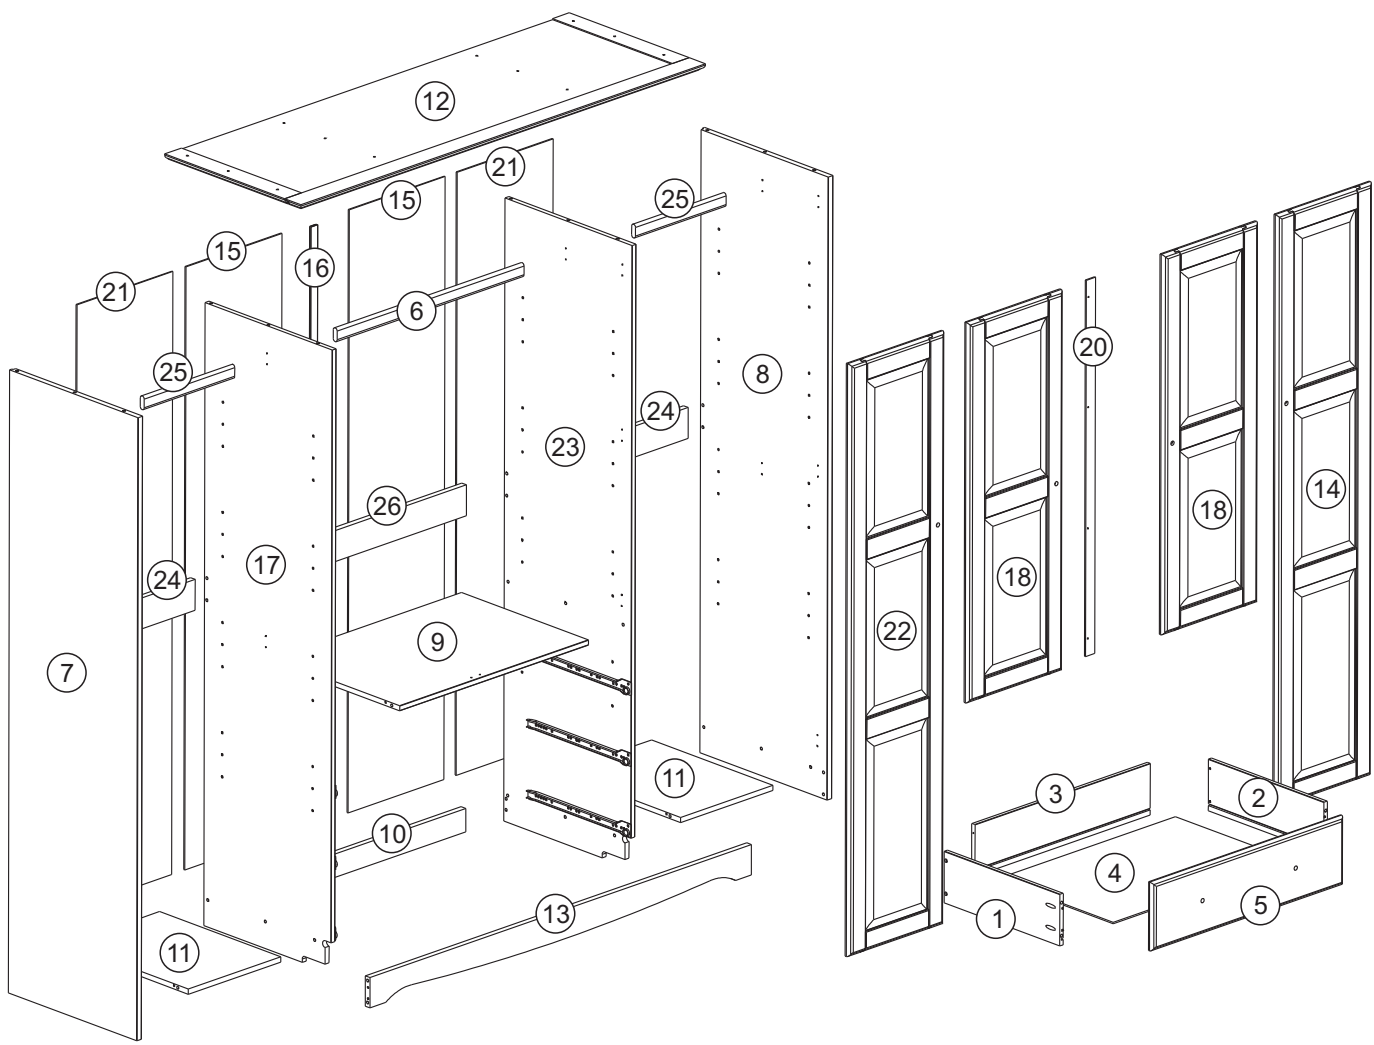E3	 400mm - 15 3/4"	03
E4	 400mm - 15 3/4"	03
F4		12
F5		12
F8		02
F9		01
G1	 10x10	52
H1		10

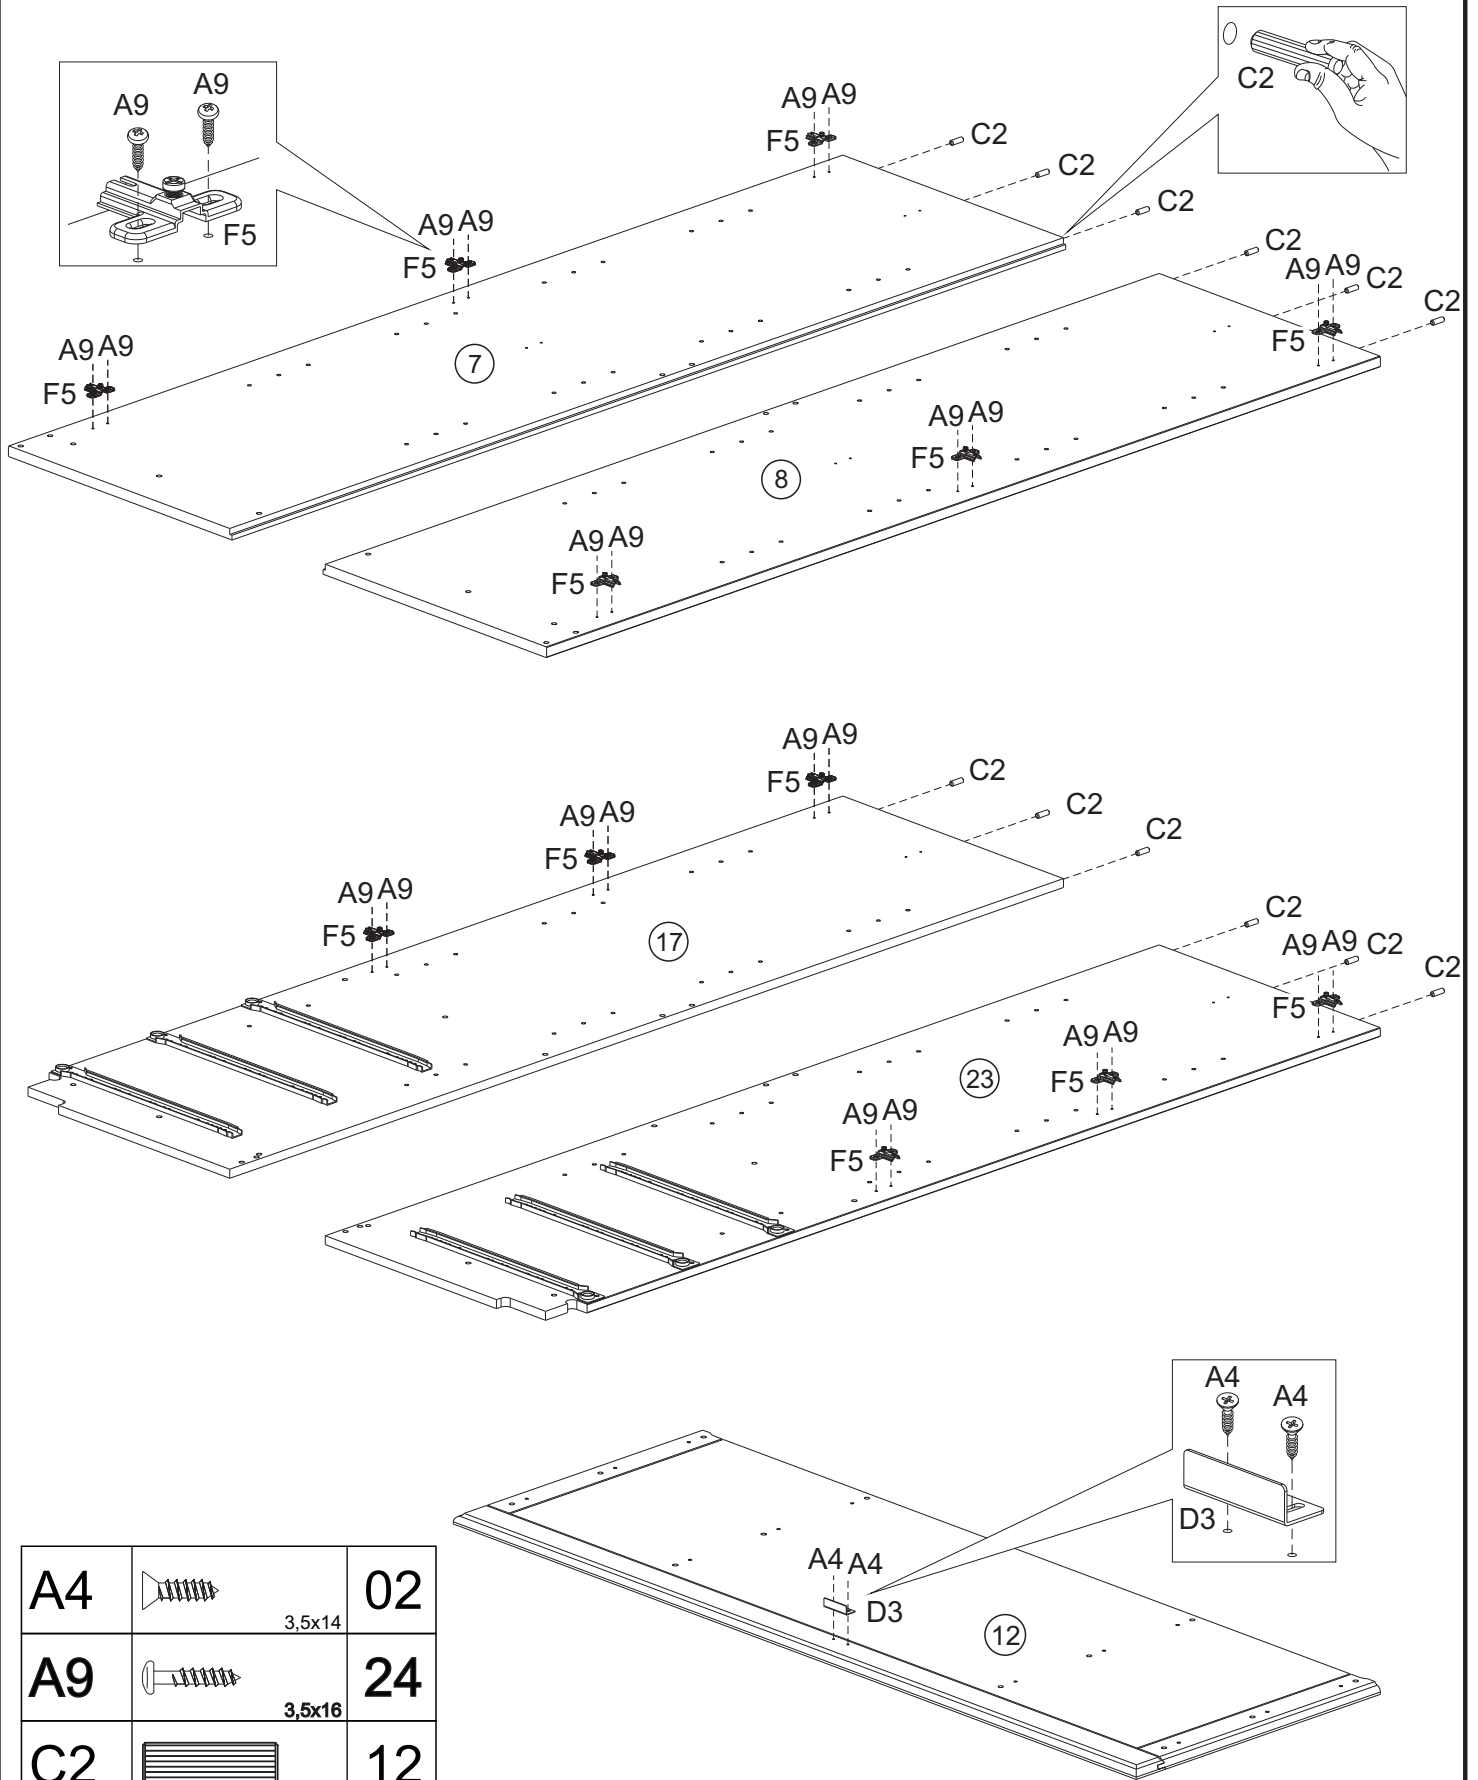



01)




A4	 3,5x14	02
A9	 3,5x16	24
C2	 8,0x25	12
D3		01
F5		12


# 02)

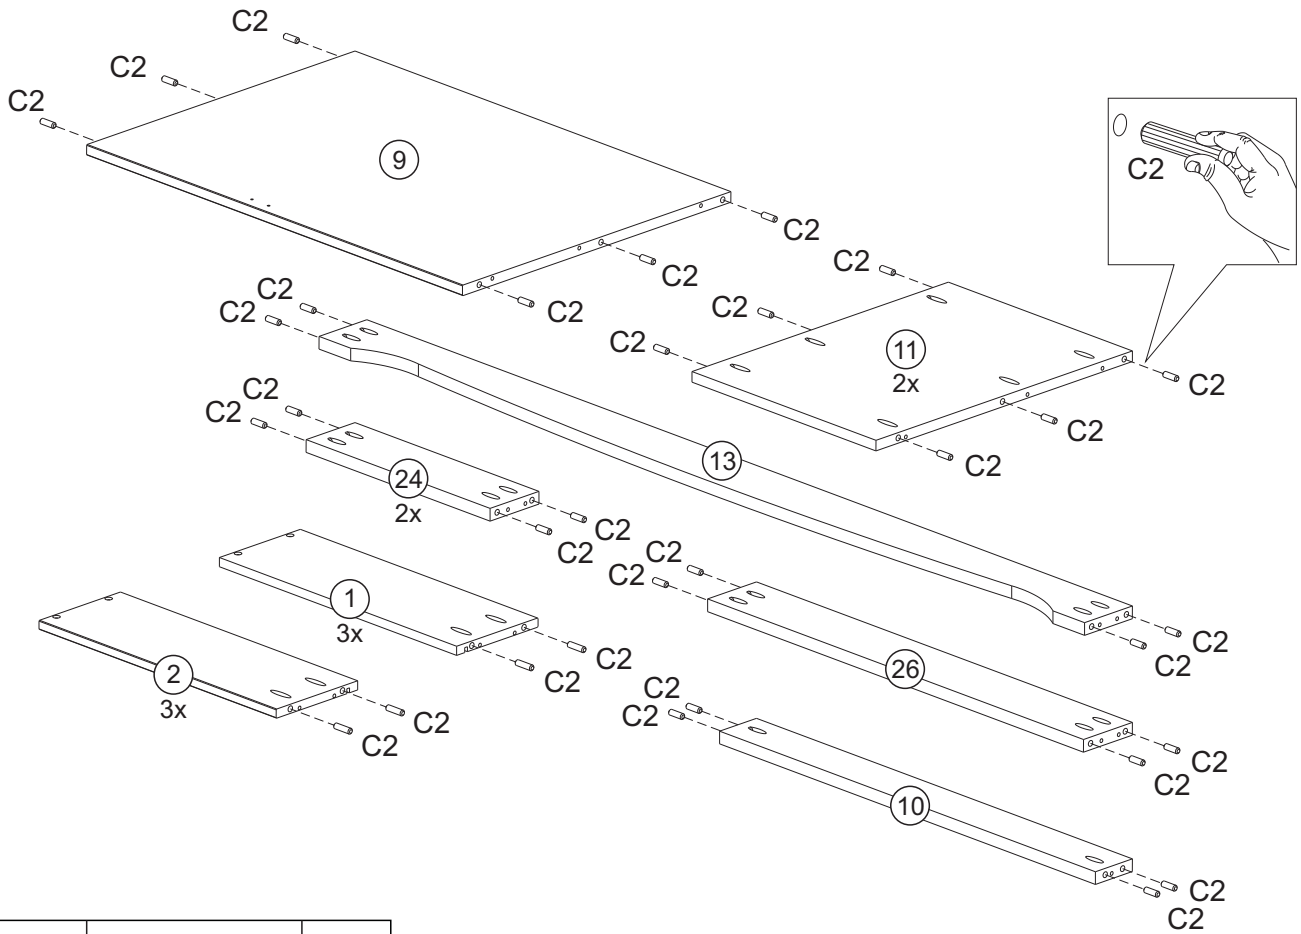


C2		50
	8,0x25	

# 03)

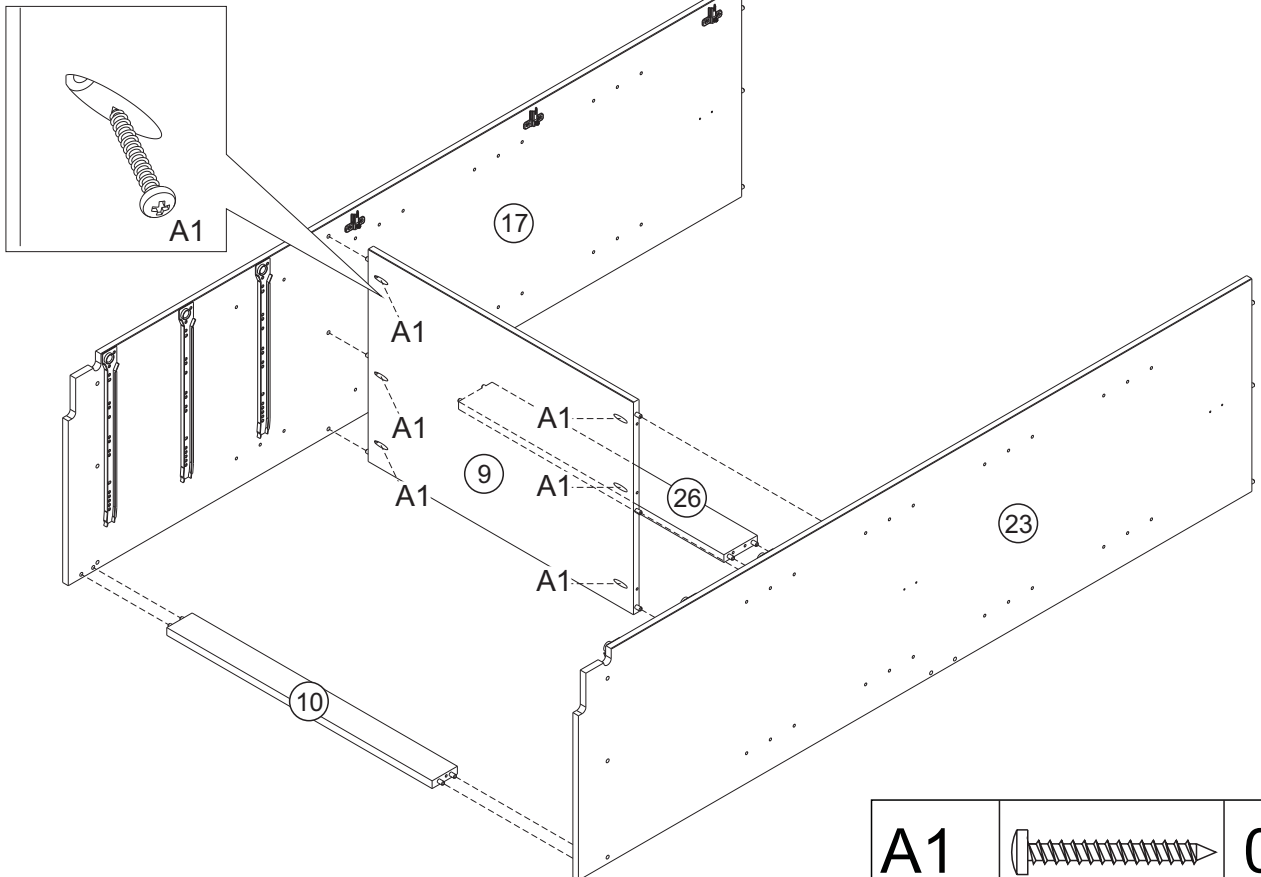


A1		06
	4,0x30	


04)

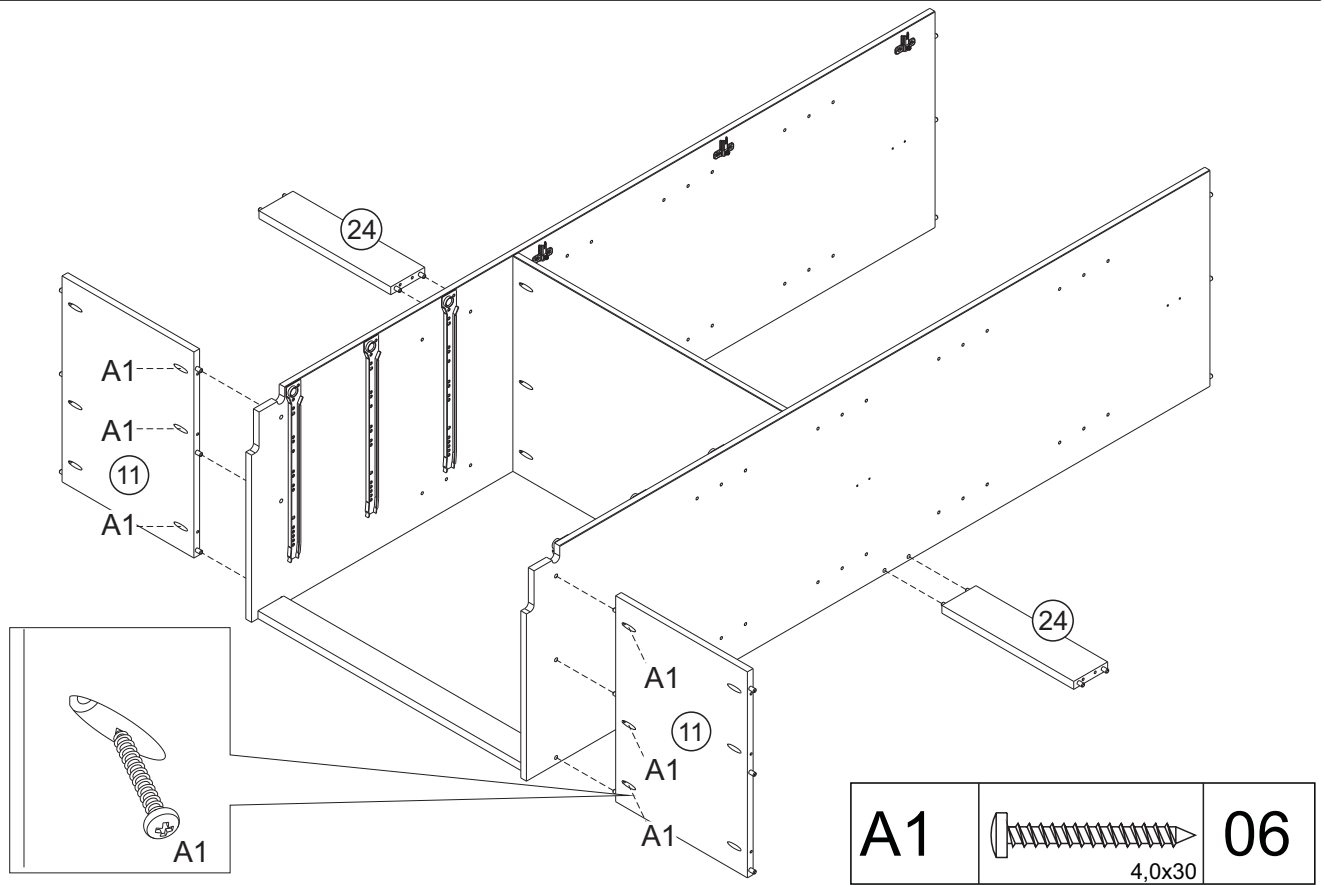


05)

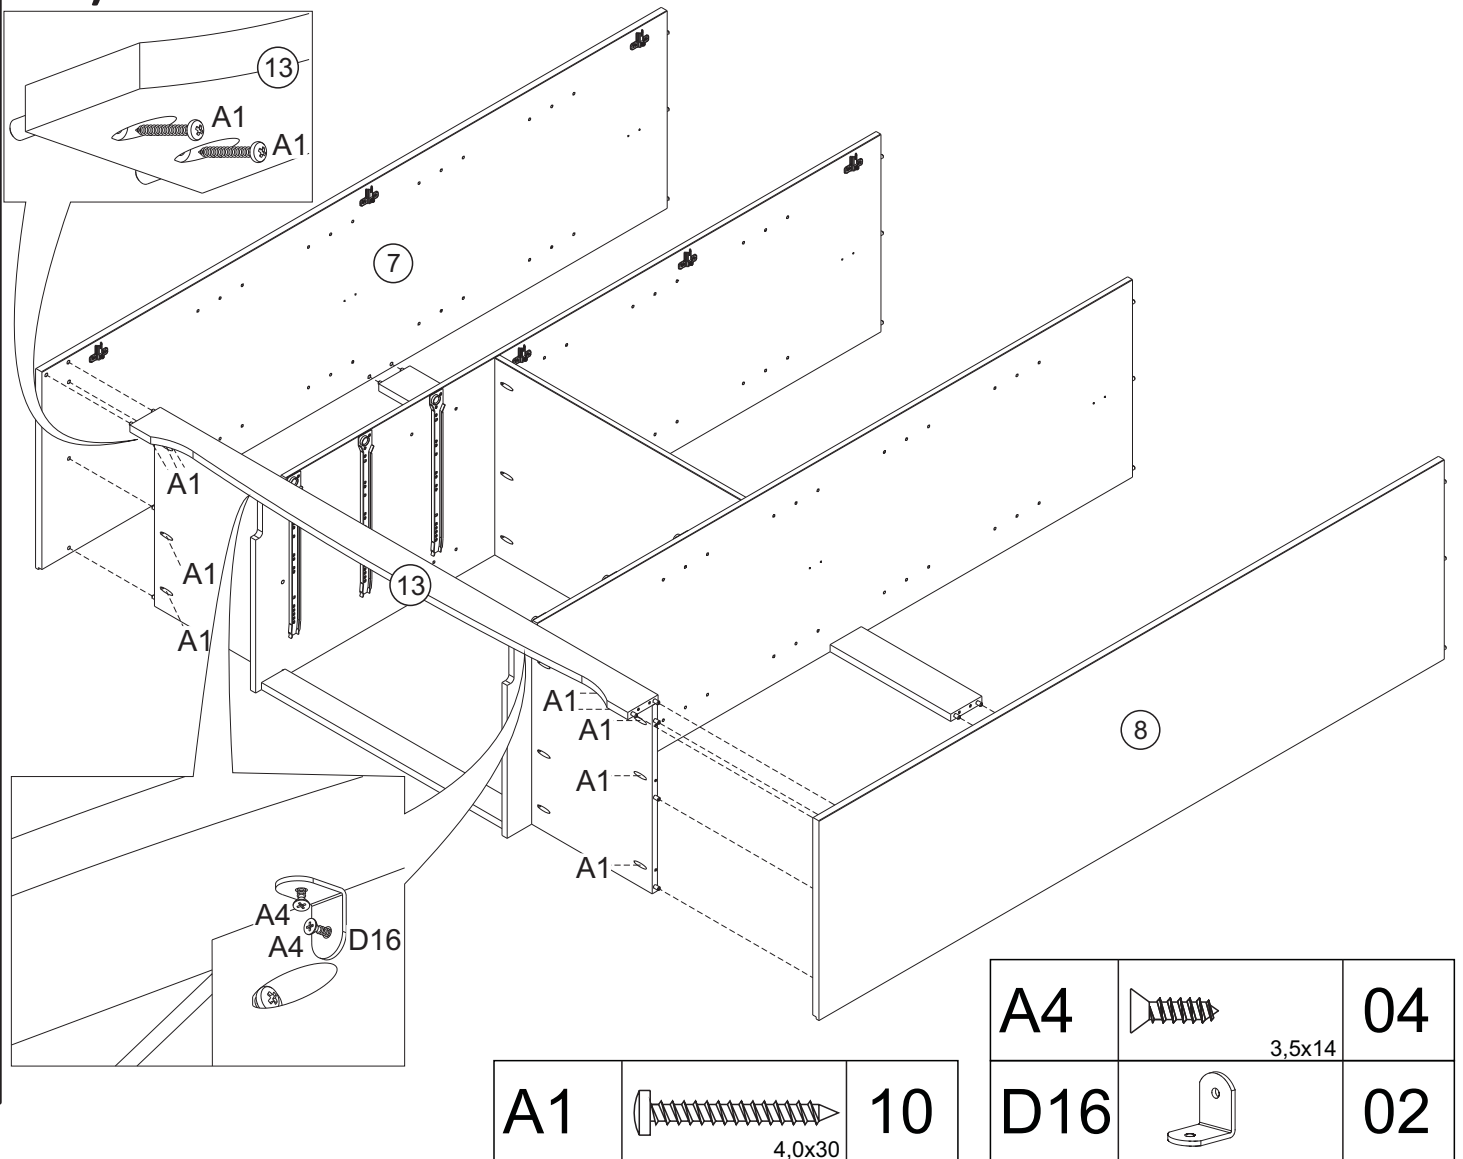



06)

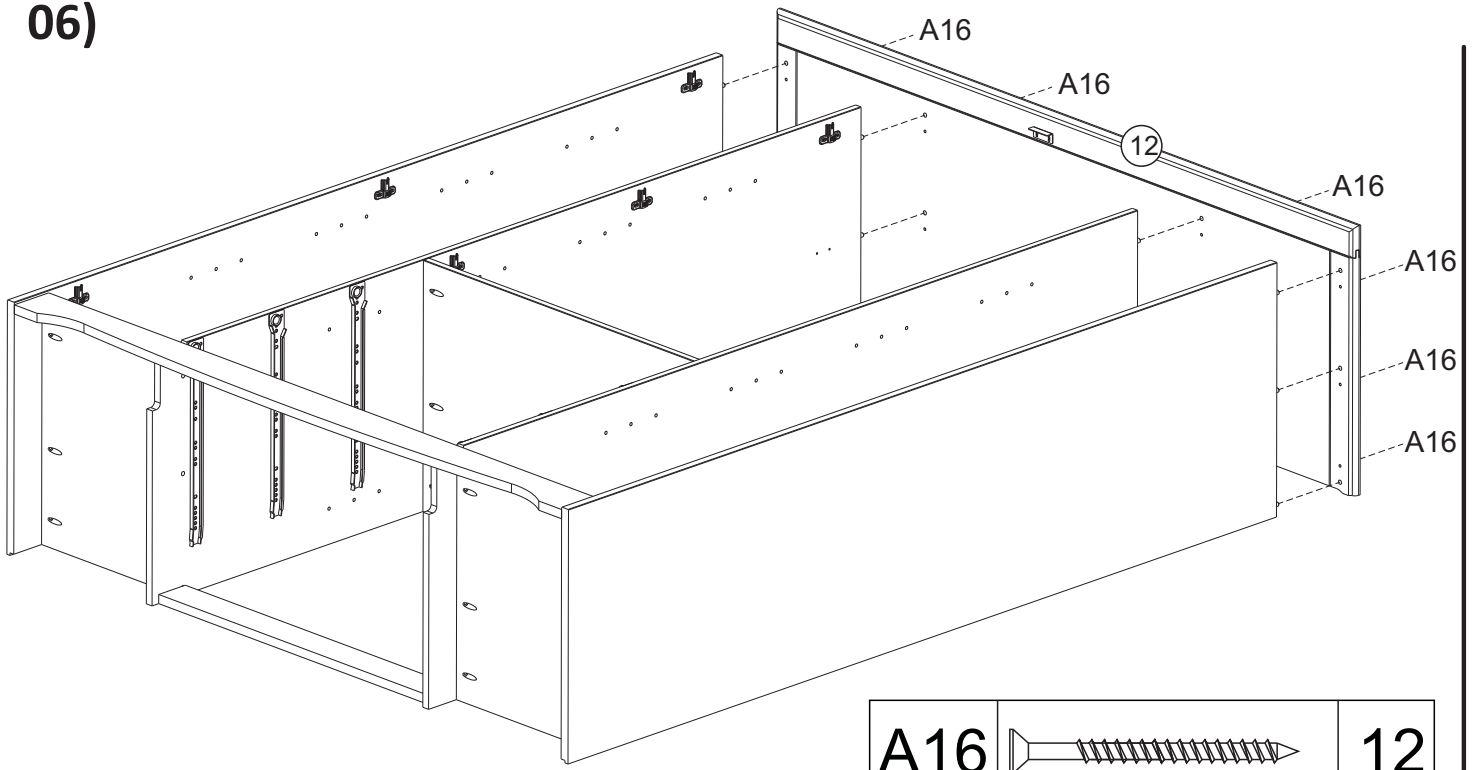


<b>A16</b>		<b>12</b>
	4,0x40	

07)

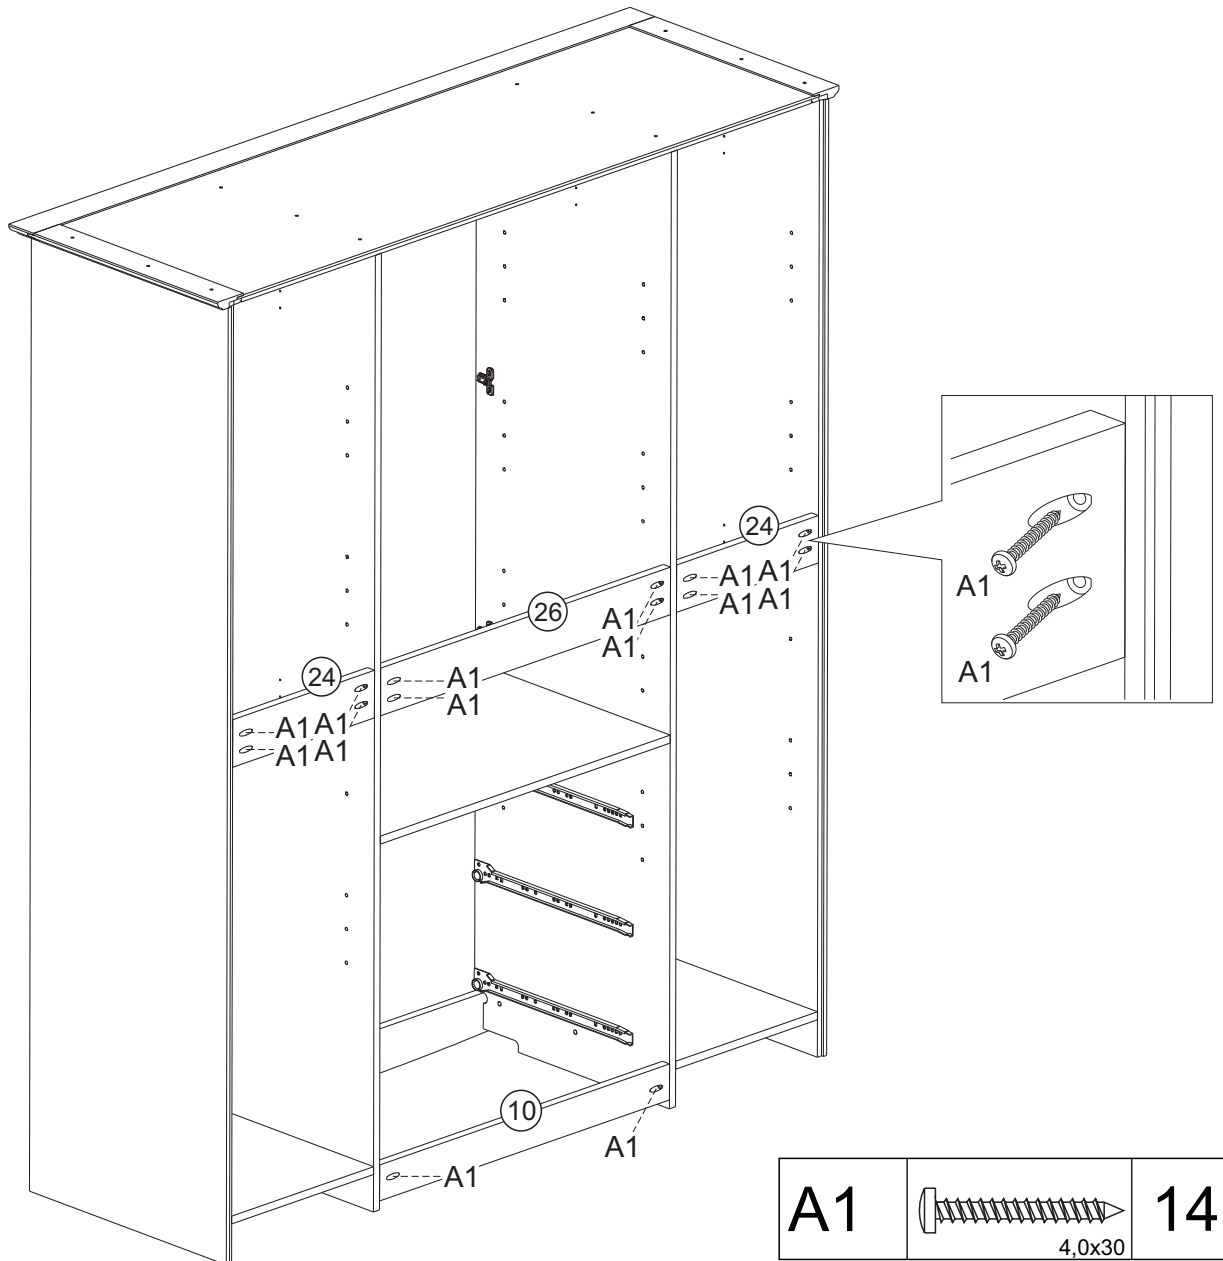


<b>A1</b>		<b>14</b>
	4,0x30	


08)

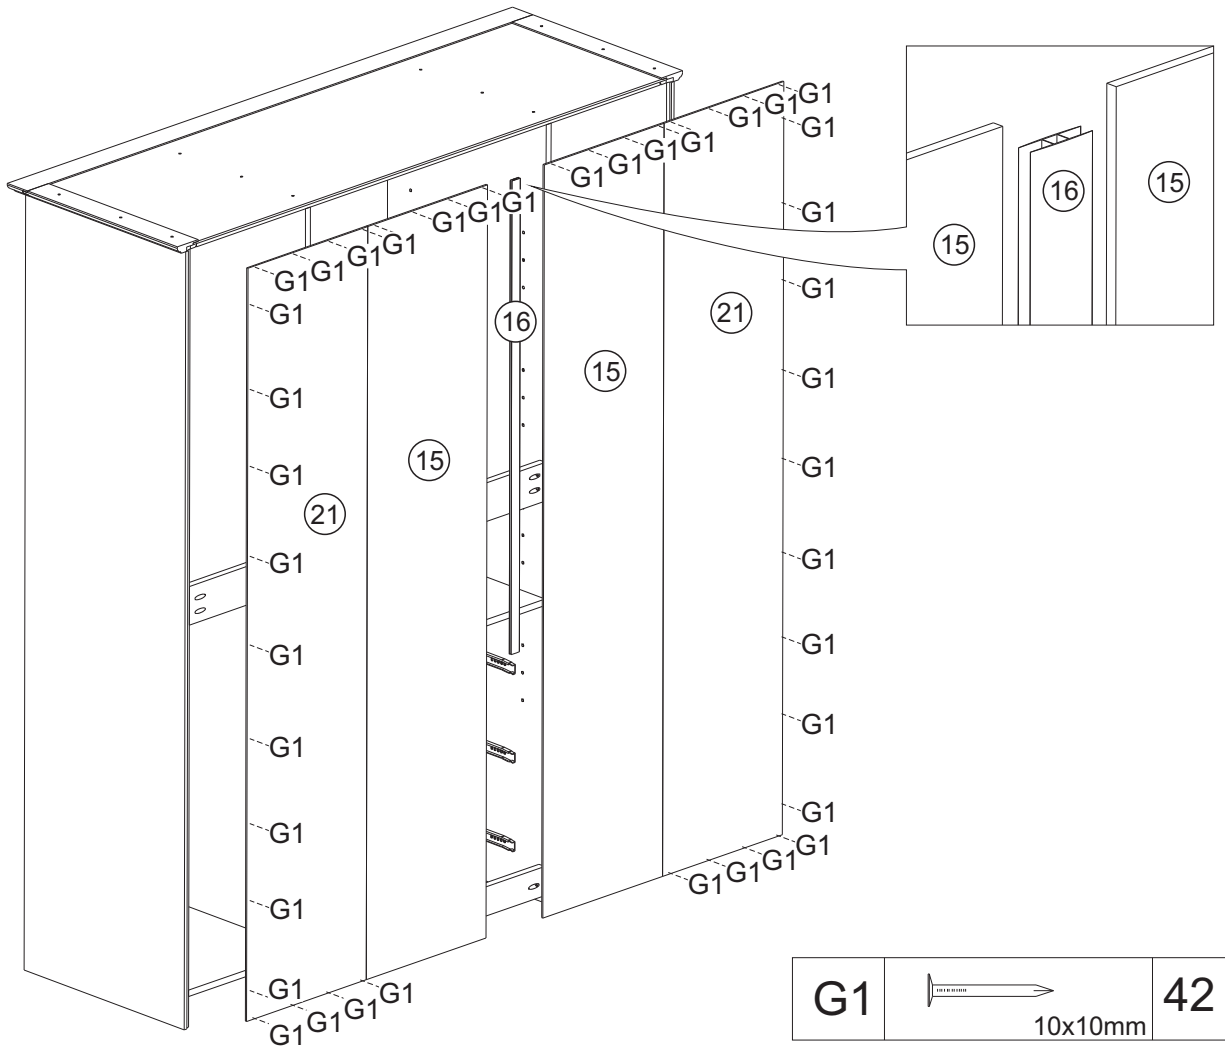


09)


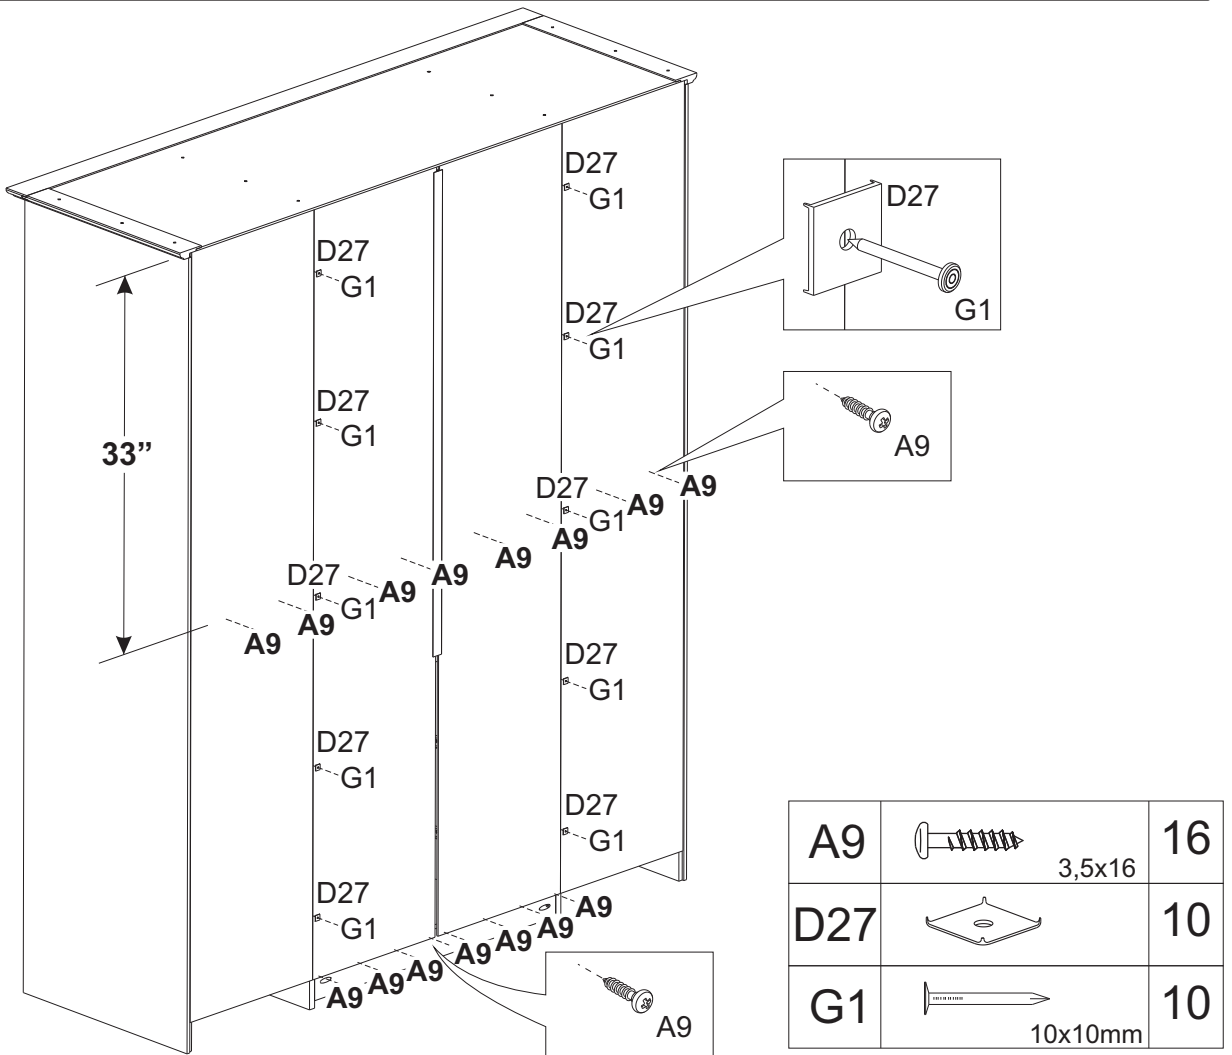


10)

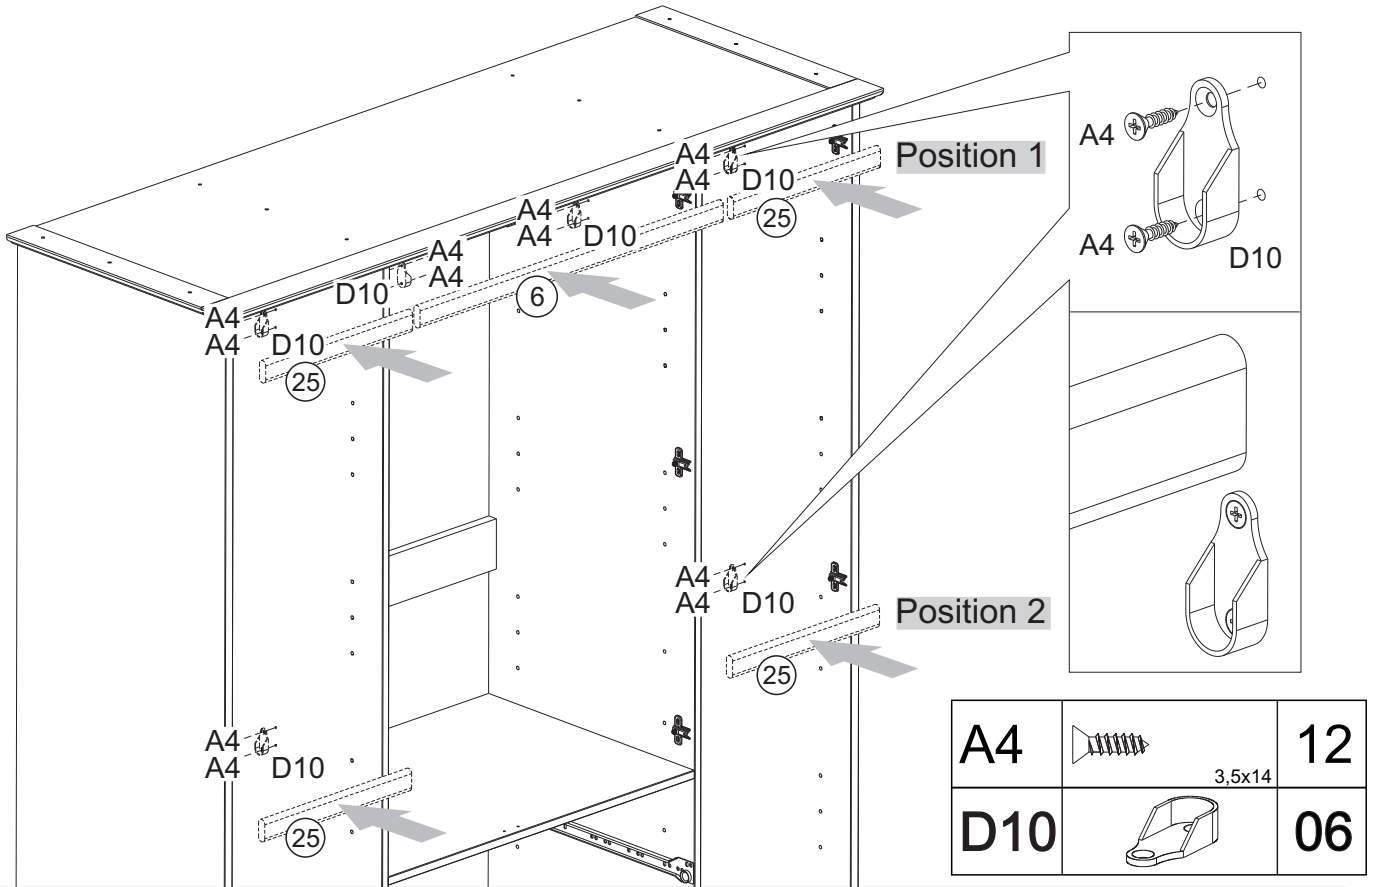


11)


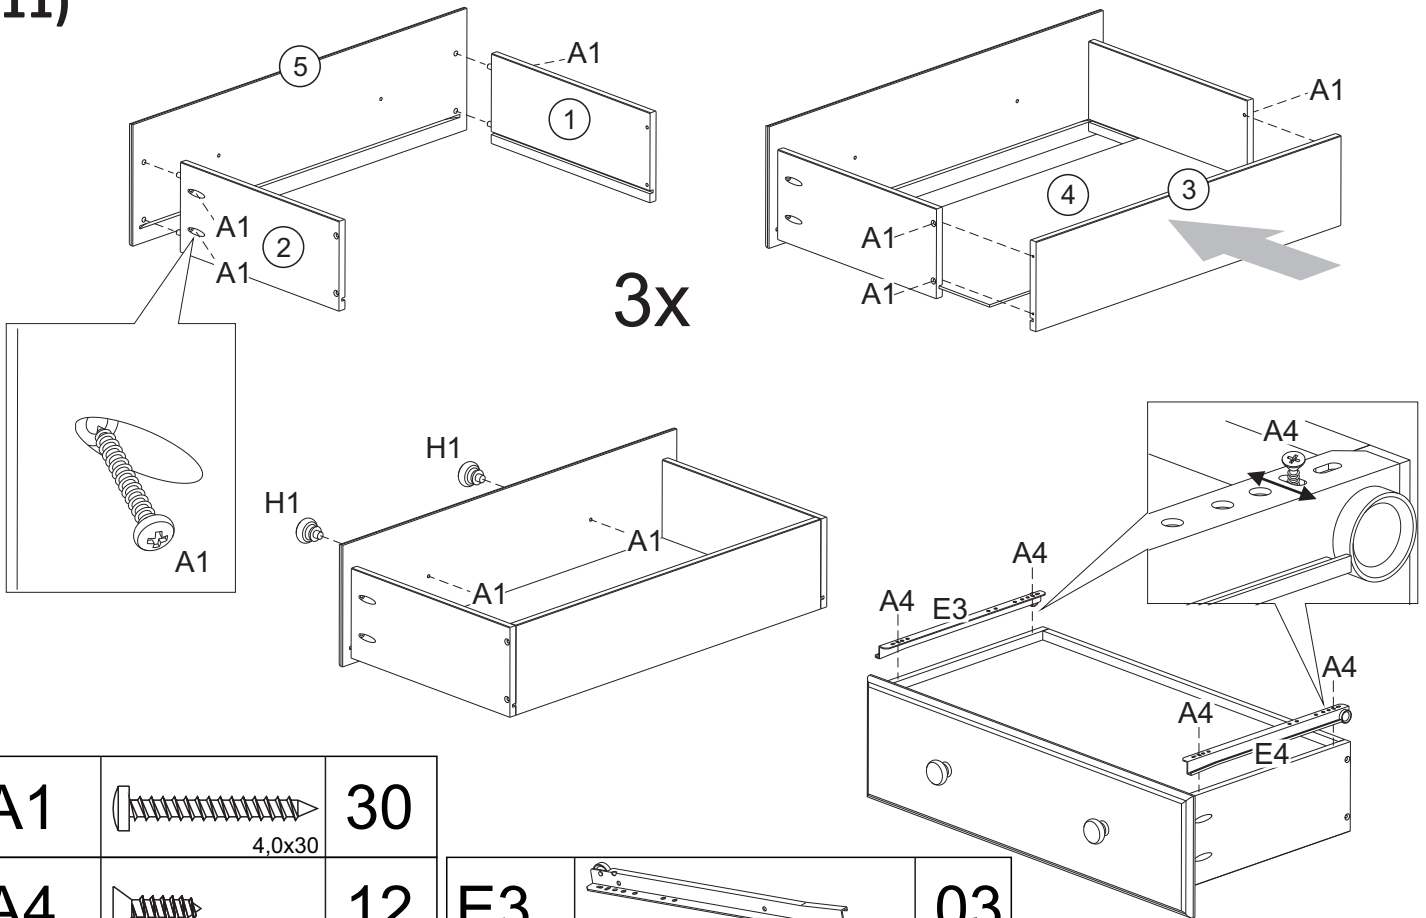


E3		03
	400mm - 15 3/4"	
E4		03
	400mm - 15 3/4"	







12)

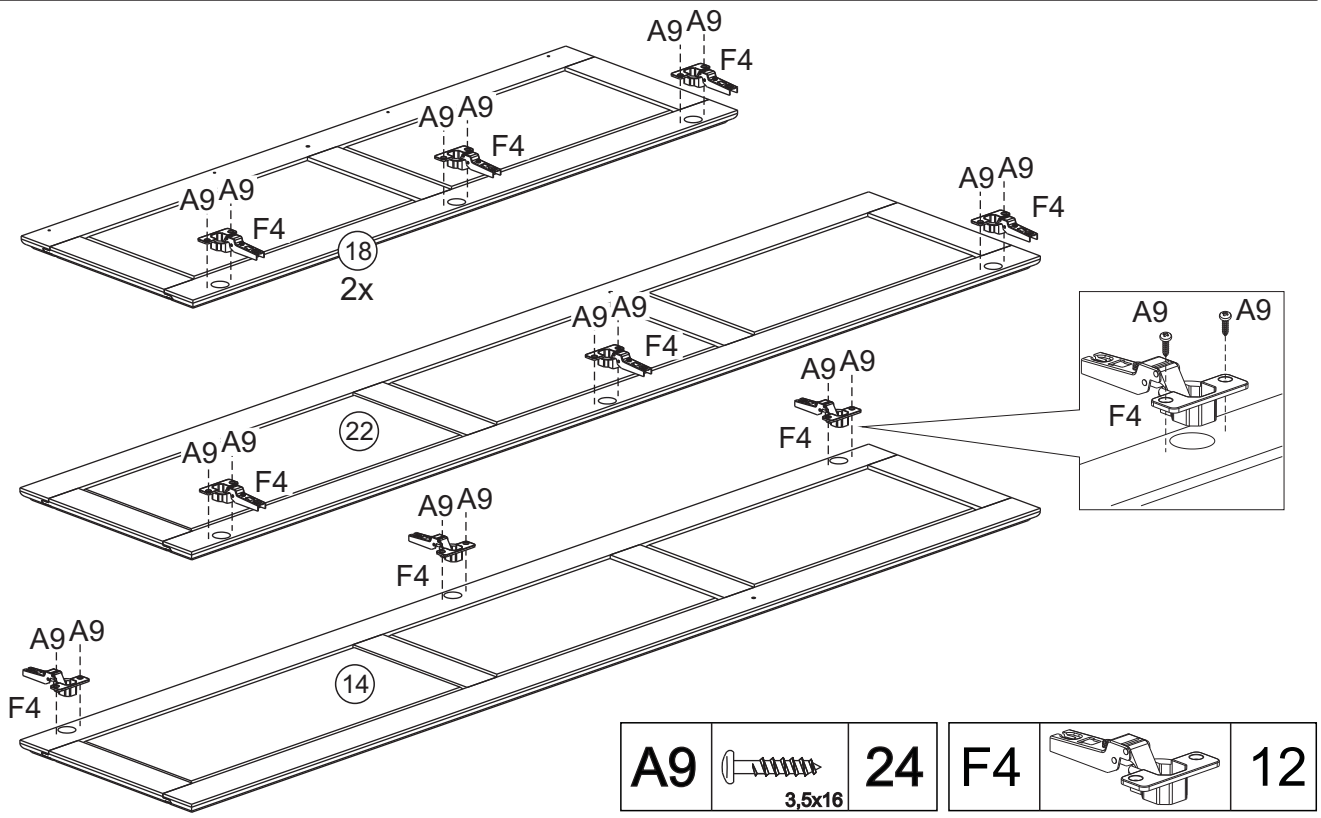



A9		24	F4		12
----	--	----	----	---	----

13)

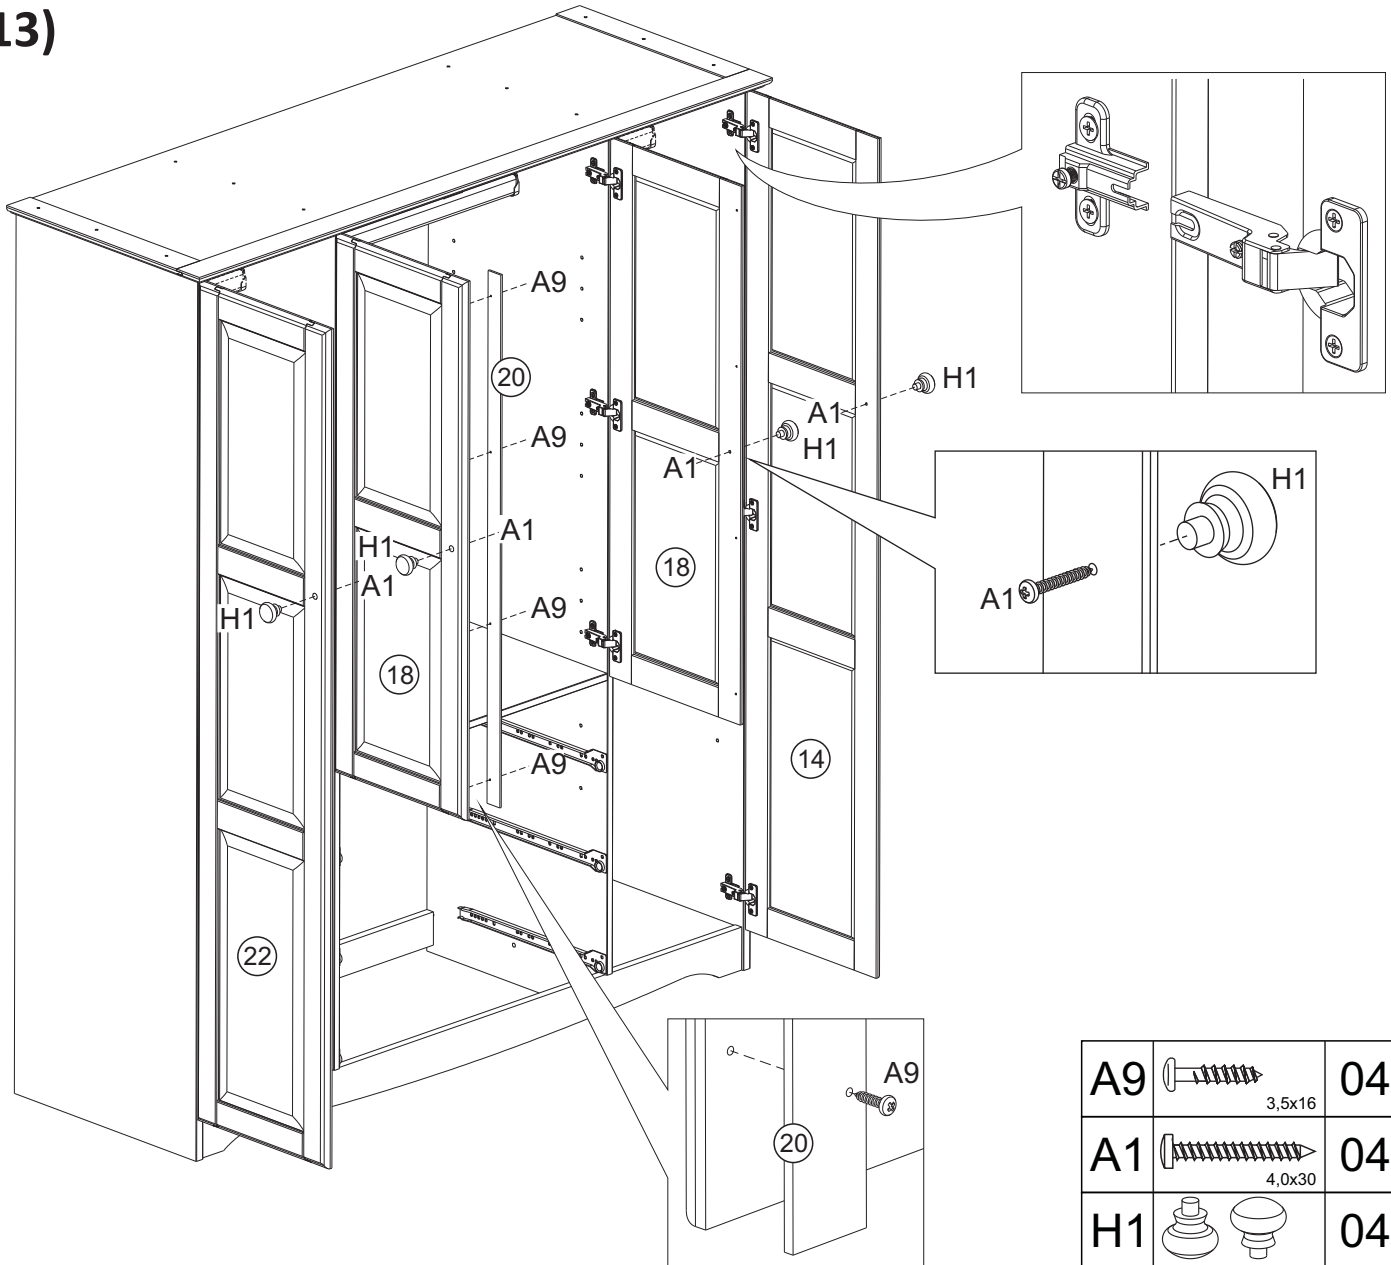


A9		04
A1		04
H1		04






14)

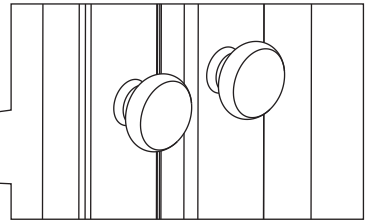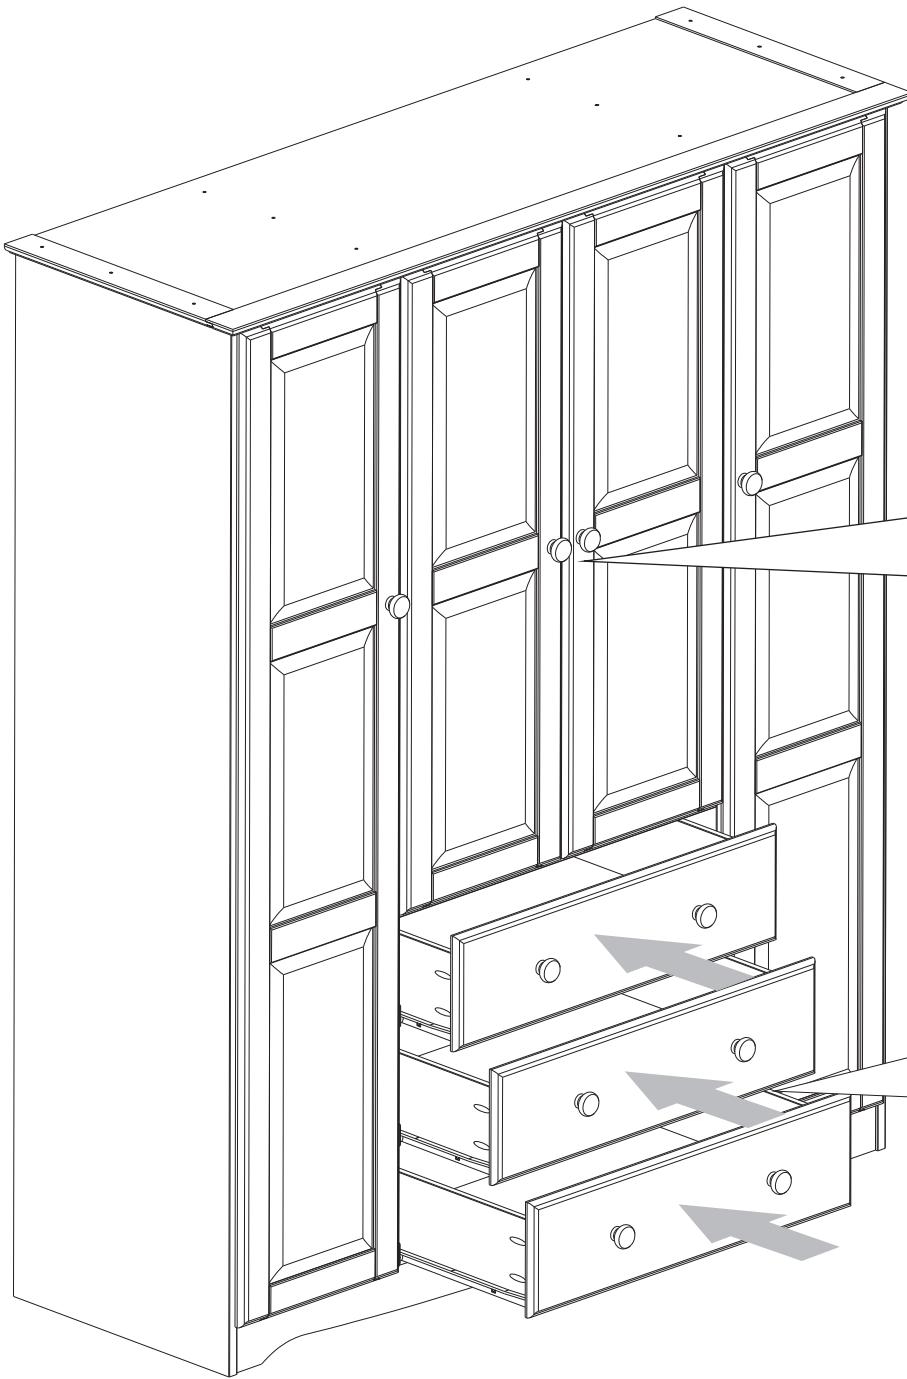




Metal glides can be adjusted as shown below - Steps 1 through 3

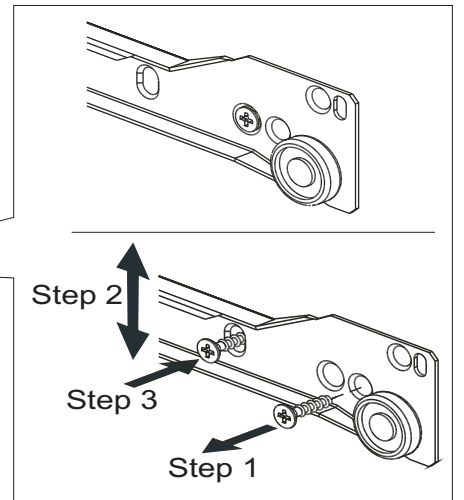

15)

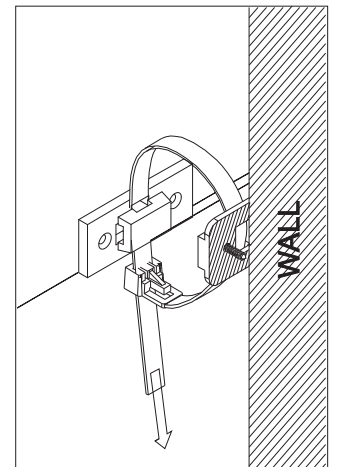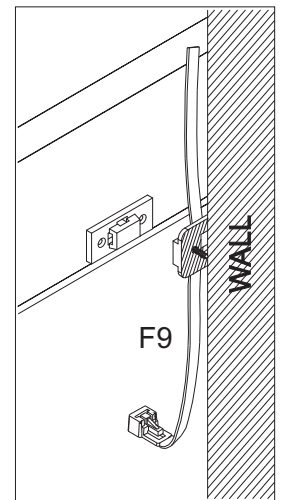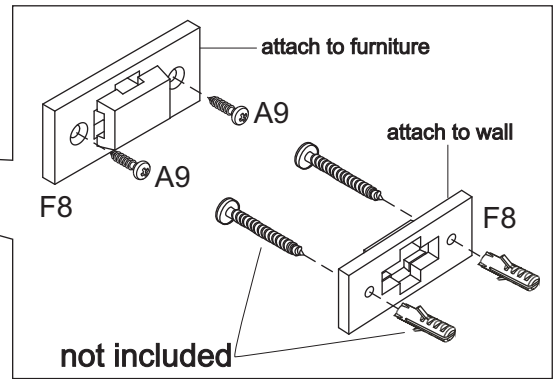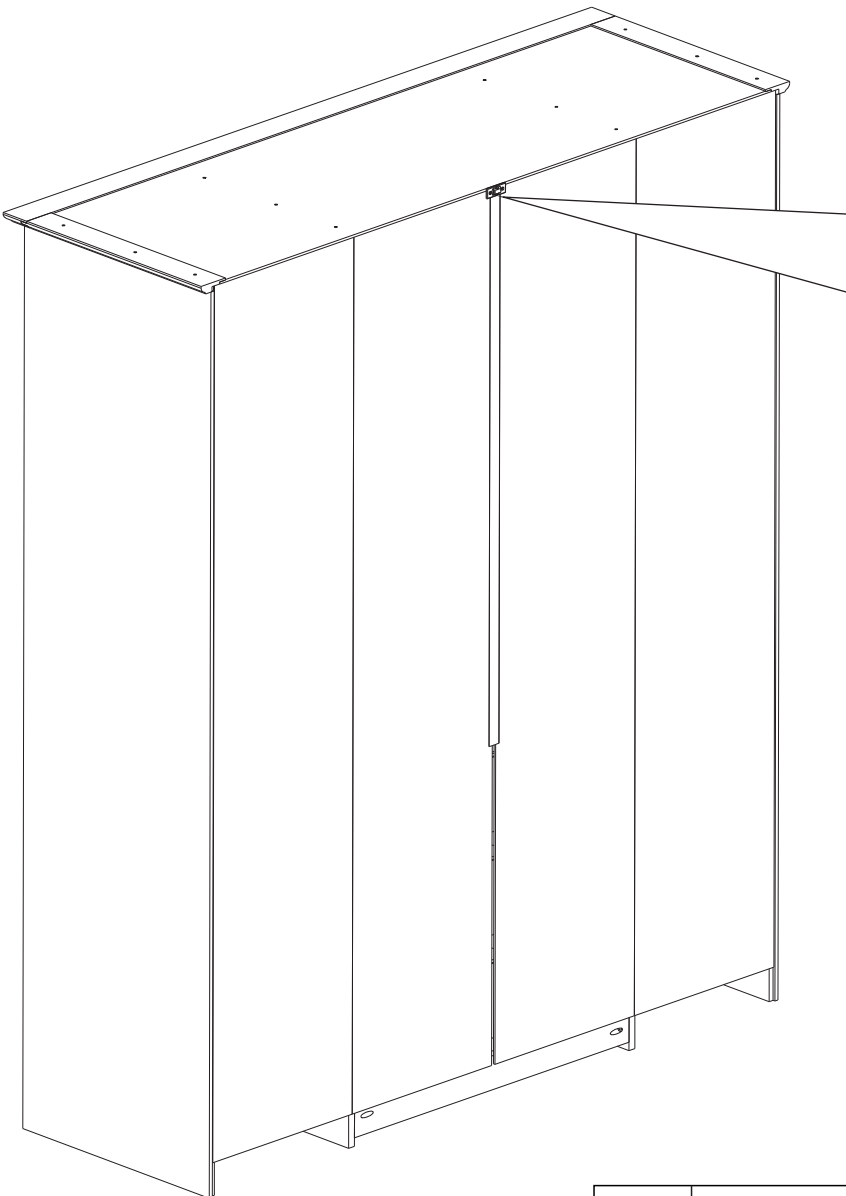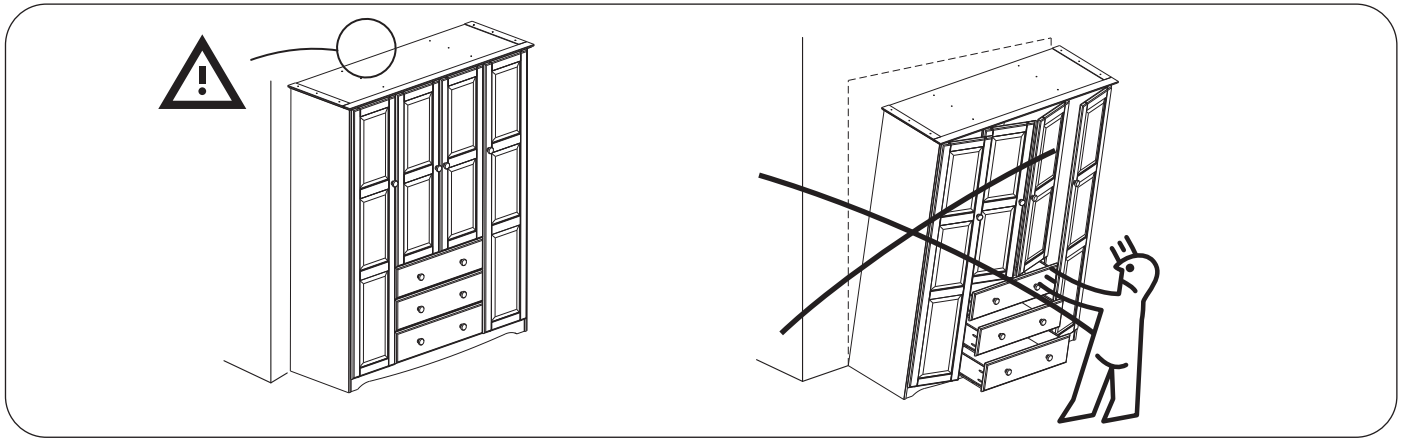

A9	 3,5x16	02
F8		02
F9		01